

AERODROME GROUND MOVEMENT
AND AIRCRAFT PARKING CHART – ICAOYAROSLAVL
TOWER 120.300YAROSLAVL, RUSSIA
TUNOSHNA**WARNING:**

1. The RWY is 44 m wide which is less than the required standard. Take-off, landing and taxiing of index 6 ACFT (Il-96) shall be executed when cross-wind component conforms to the one indicated in the Aeroplane Flight Manual for the specified ACFT type, with flight crew's increased caution
2. Taxiing of ACFT into/out of stands 15, 16 via TWY B shall be executed under own engines power or by towing.
3. Taxiing of index 6 ACFT into/out of stand 15 shall be executed via TWY B when stand 16 is vacant.
4. Taxiing of Il-96 ACFT via TWY E is prohibited. Taxiing of Il-96 ACFT into stand 16 via TWY B shall be executed by towing.
5. Taxiing of index 3 ACFT into/out of stands 13, 14 via MAIN TWY, TWY B shall be executed under own engines power after "Follow-me" vehicle, taxiing of index 4-6 ACFT – only by towing.
6. Taxiing of index 3 ACFT into/out of stands 6-12 via MAIN TWY, TWY C, TWY B shall be executed under own engines power after "Follow-me" vehicle, taxiing of index 4-6 ACFT - only by towing.
7. Taxiing of index 3 ACFT via MAIN TWY shall be executed at minimum speed strictly along the centre line of MAIN TWY after "Follow-me" vehicle with flight crew's increased caution.
8. Taxiing of index 2 ACFT into/out of stand 5 via MAIN TWY, TWY C shall be executed under own engines power after "Follow-me" vehicle or by towing.
9. Segment of MAIN TWY from TWY D to stand 4 is CLOSED for taxiing of ACFT.
10. TWY D is CLOSED for taxiing of all types of ACFT.
11. TWY C is equipped with retroreflective signs. Taxiing of index 2 ACFT via TWY C shall be executed only with lights switched on, after "Follow-me" vehicle, when visibility is 800 m or above.
12. Taxiing of ACFT into/out of stands 1-4 via TWY E shall be executed under own engines power or by towing.
13. Taxiing of index 6 ACFT into/out of stand 2, when stand 1 is vacant, shall be executed by towing.
14. Turns on the runway of ACFT with MTOM 100 tons or above shall be executed on the runway turn pad only.