


AIRCRAFT PARKING  
CHART - ICAO

SHEREMETYEVO APRON 1	121.900
SHEREMETYEVO GROUND 2	121.800

MOSCOW, RUSSIA


SHEREMETYEVO

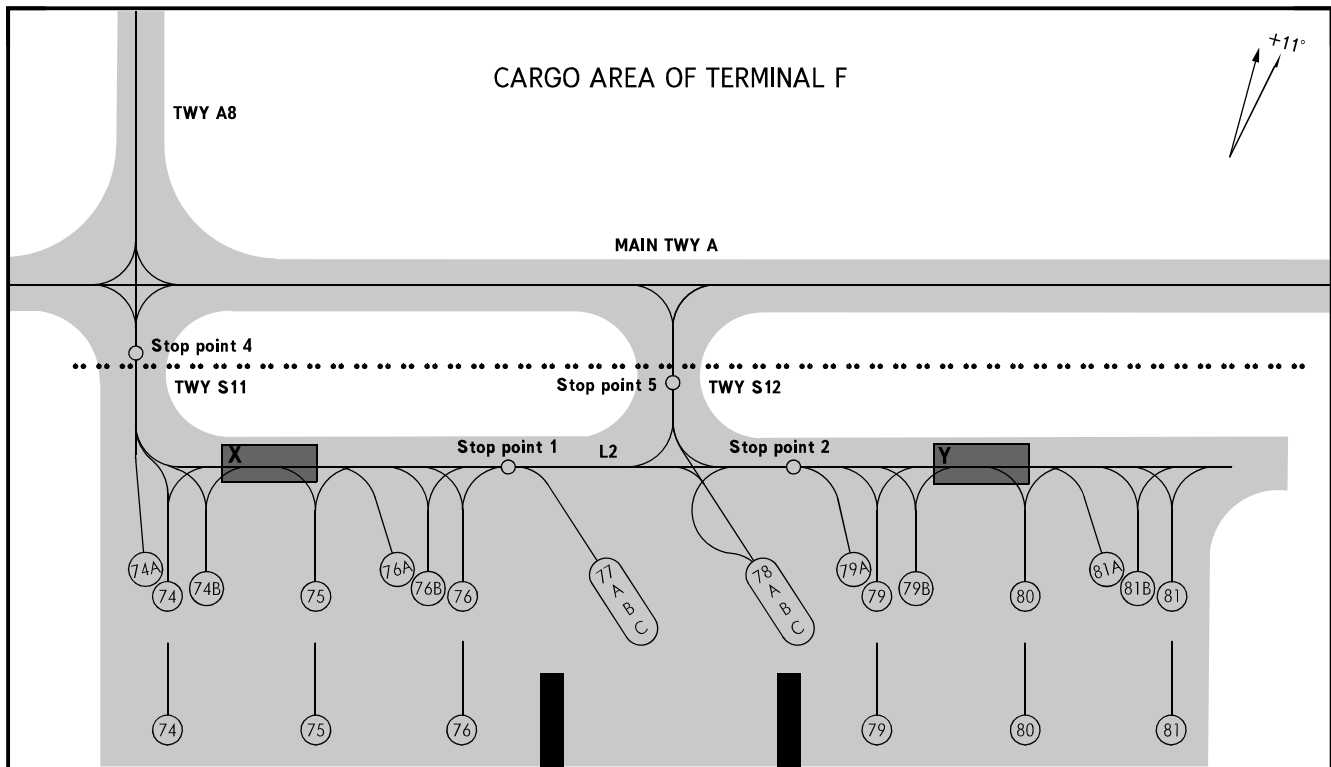

Not to scale

LEGEND

- engines start-up position

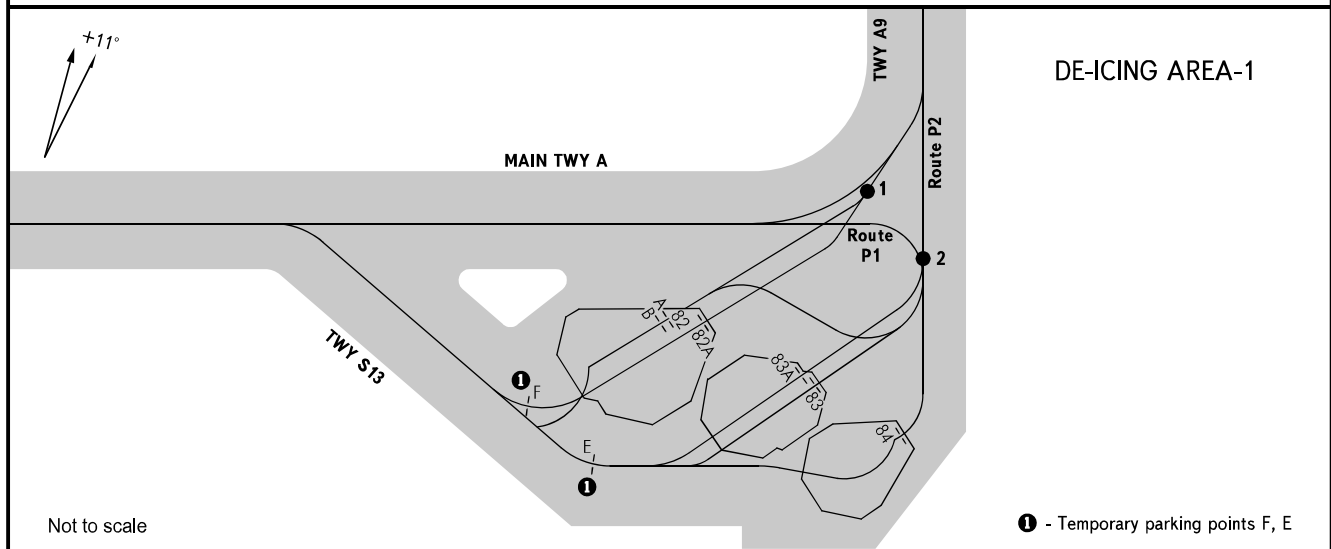

Not to scale

- Temporary parking points F, E

**NOTE:**

- Taxiing to stands 74B, 76B, 79B, 81B, 74, 75, 76, 79, 80, 81 shall be carried out under own engines power via TWY S11, S12 after "FOLLOW ME" vehicle onto the apron taxi guide line. Stop after vacation of TWY. Parking onto the stands shall be carried out by towing. Exit from the stands shall be carried out by towing to start-up position "X" or "Y" respectively, then proceed under own engines power via TWY S11 or TWY S12.
- Taxiing into stands 74, 75, 76, 79, 80, 81 is allowed under own engines power via TWY S11, S12 after "FOLLOW ME" vehicle. Exit from stands shall be carried out by towing to start-up position "X" or "Y" respectively, then proceed under own engines power via TWY S11 or TWY S12.

**ACFT types:**

- B747-400, MD-11, A-340-600 and smaller ACFT
- B767-200, B767-300, DC-8, A-310, Il-62, Tu-204 and ACFT with smaller wingspan
- B757, Tu-154W and ACFT with smaller wingspan
- B747SP, A-340-200, A-340-300, A-330-200, A-330-300, Il-96M, B767-400, MD-11, MD-11F, Il-76, DC-10
- A-320-200W

**STANDS:**

- 77, 78, 74A, 76A, 79A, 81A
- 74, 75, 79, 80, 81 facing MAIN TWY A
- 74, 75, 76, 79, 80, 81 tail towards MAIN TWY A
- 74, 76B, 79B, 81B, 74A, 76A, 79A, 81A
- 74, 75, 76, 79, 80, 81