

AERODROME
CHART - ICAO

ARP
61°38'49"N
050°50'42"E

 
ELEV
339'

SIVKAR START 124.600

SYKTYVKAR, RUSSIA

SYKTYVKAR

PZ - 90.11 coordinates




RWY	DIRECTION (TRUE)	THR	BEARING STRENGTH
18	201.78°	61°39'27"N 050°51'14"E	PCN 49/F/D/X/T
36	021.76°	61°38'12"N 050°50'11"E	



ELEVATIONS IN FEET
DIMENSIONS IN METRES
BEARINGS ARE MAGNETIC

CHANGE: ELEV

MARKING AIDS RWY 36 / 18 AND EXIT TWY

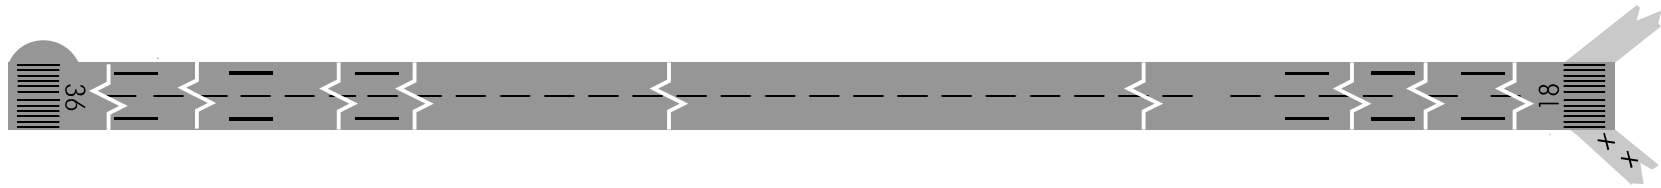

LIGHTING AIDS RWY 36 / 18 AND EXIT TWY

 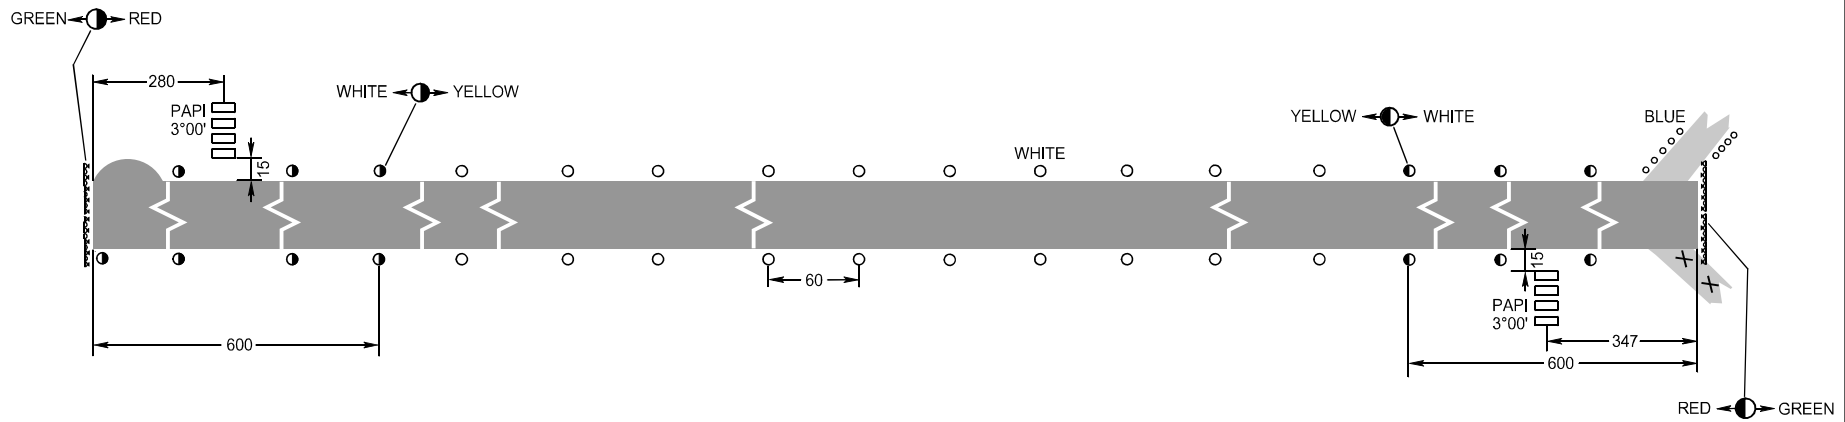

DIMENSIONS IN METRES

CHANGE: NIL