


AERODROME GROUND MOVEMENT
AND AIRCRAFT PARKING CHART - ICAO

START	120.000
TAXIING	121.700
TOWING	119.000

YAKUTSK, RUSSIA

YAKUTSK

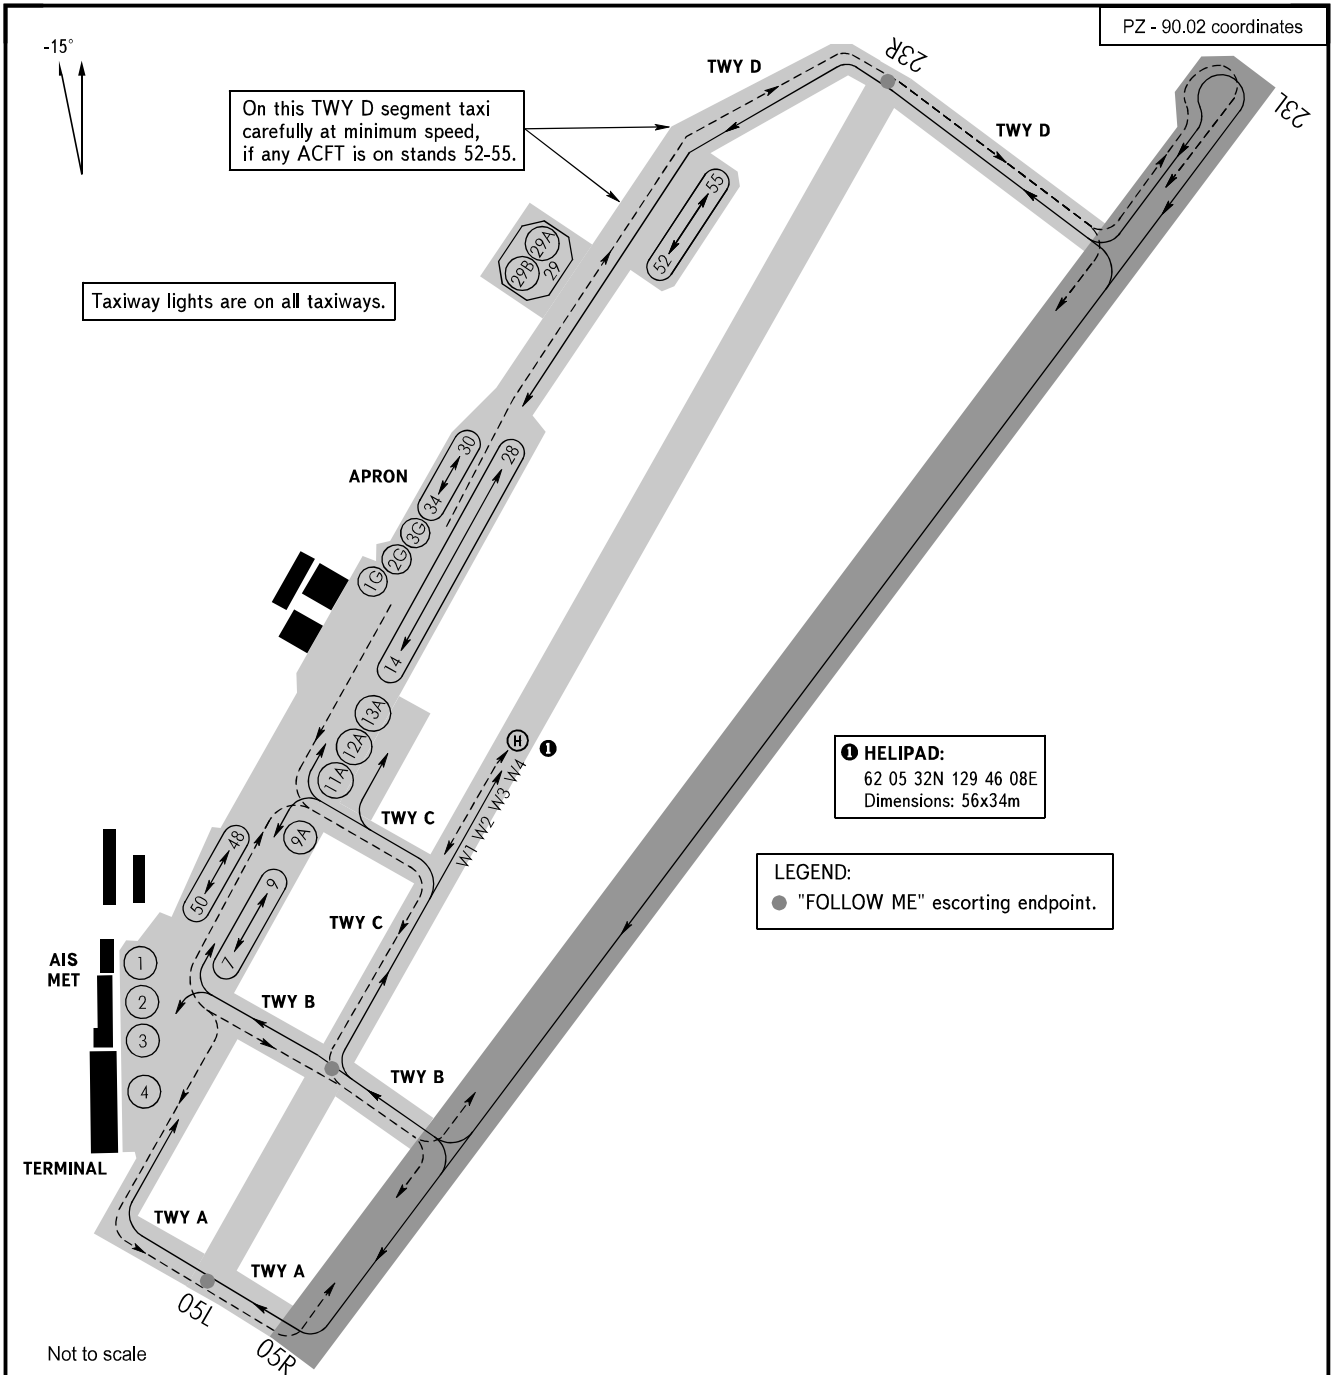

-15°

On this TWY D segment taxi carefully at minimum speed, if any ACFT is on stands 52-55.

Taxiway lights are on all taxiways.

H HELIPAD:
62 05 32N 129 46 08E
Dimensions: 56x34m

LEGEND:
● "FOLLOW ME" escorting endpoint.

AIS MET
1
2
3
4
TERMINAL

Not to scale

CHANGE: COM, VAR, HELIPAD, TWY, STANDS, WARNING

APRON:
Surface: Asphalt-Concrete
Strength: PCN 39/R/B/X/T

TAXIWAYS:
Width: A, B - 22.5m
C - 15.0m (from APRON to RWY 05L)
 - 22.5m (on RWY 05L)
D - 21.5m

Surface: All taxiways - Concrete
Strength: A (from APRON to RWY 05L) - PCN 45/R/B/X/T
 A (from RWY 05L to RWY 05R) - PCN 50/R/B/X/T
 B (from APRON to RWY 05L) - PCN 39/R/B/X/T
 B (from RWY 05L to RWY 05R) - PCN 49/R/B/X/T
 C (from APRON to RWY 05L) - PCN 20/R/B/X/T
 C (on RWY 05L between TWY C and TWY B) - PCN 18/R/B/X/T
 D (from APRON to stand 52) - PCN 18/R/B/X/T
 D (from stand 52 to RWY 05L) - PCN 67/R/B/X/T
 D (from RWY 05L to RWY 05R) - PCN 50/R/B/X/T

WARNING:

1. From May, 1 till October, 1 start-up is prohibited on stands 7-9, 9A, 11A, 12A, 13A for all ACFT with low-mounted engines. Start-up shall be carried out on apron or TWY only.
2. Engines start-up is prohibited on stands 1-4. APU start-up allowed only.
3. Parking onto stands 1, 2, 3 shall be executed under own engines power, taxiing out of these stands - by towing.
4. TWY C is allowed for taxiing of ACFT with wingspan up to 38m and maximum weight up to 61 tons. Taxiing shall be carried out at idle power of inboard engines.
5. After landing run on RWY 23L all heavy ACFT with low-mounted engines shall make a RIGHT turn at junction of RWY 05R/23L and TWY A to avoid destroy of TWY designators by a jet blast.
6. The helipad has a day marking.