


STANDARD ARRIVAL CHART
INSTRUMENT (STAR) - ICAO

BLAGOVESHCHENSK, RUSSIA
IGNATYEVO
RNAV RWY 18

TRANSITION
LEVEL: ①

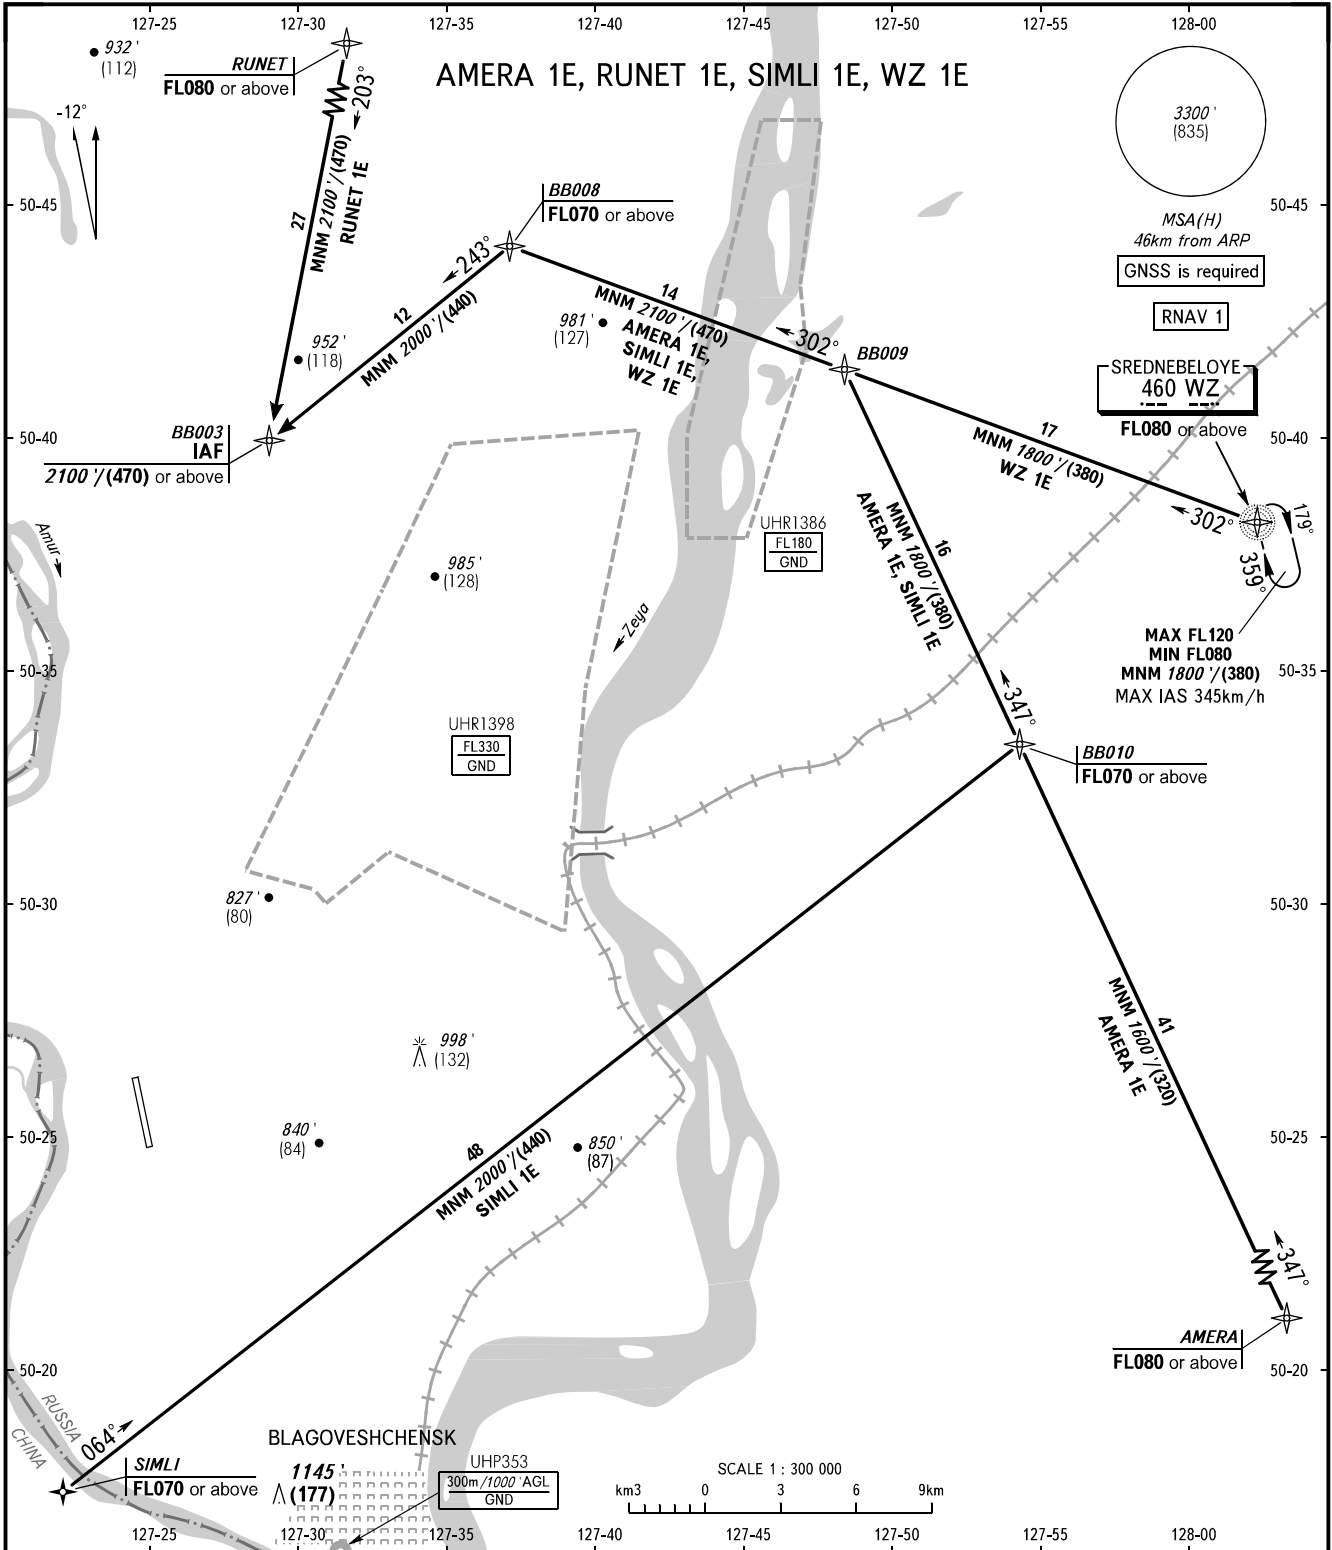

TOWER 127.200

① TRANSITION LEVEL:

- FL050 when QNH is 1013 hPa (760mm mercury column) or above;
- FL060 when QNH is 977 hPa (733mm mercury column) or above, but less than 1013 hPa (760mm mercury column);
- FL070 when QNH is less than 977 hPa (733mm mercury column).

WARNING:

1. When restricted area UHR1386 is active, utilization of all routes, except RUNET 1E, by coordination with ATS unit.
2. Holding area is AVBL by coordination with ATS unit.

BEARINGS AND TRACKS ARE MAGNETIC
ALTITUDES IN FEET AND METRES
ELEVATIONS IN FEET AND METRES
DISTANCES IN KILOMETRES

Alt set: -QNH(QFE on req);
-hPa(mm on req).

CHANGE: Heading, HGT