


STANDARD ARRIVAL CHART  
INSTRUMENT (STAR) - ICAO

BLAGOVESHCHENSK, RUSSIA  
IGNATYEVO  
RNAV RWY 18

TRANSITION  
LEVEL: 1

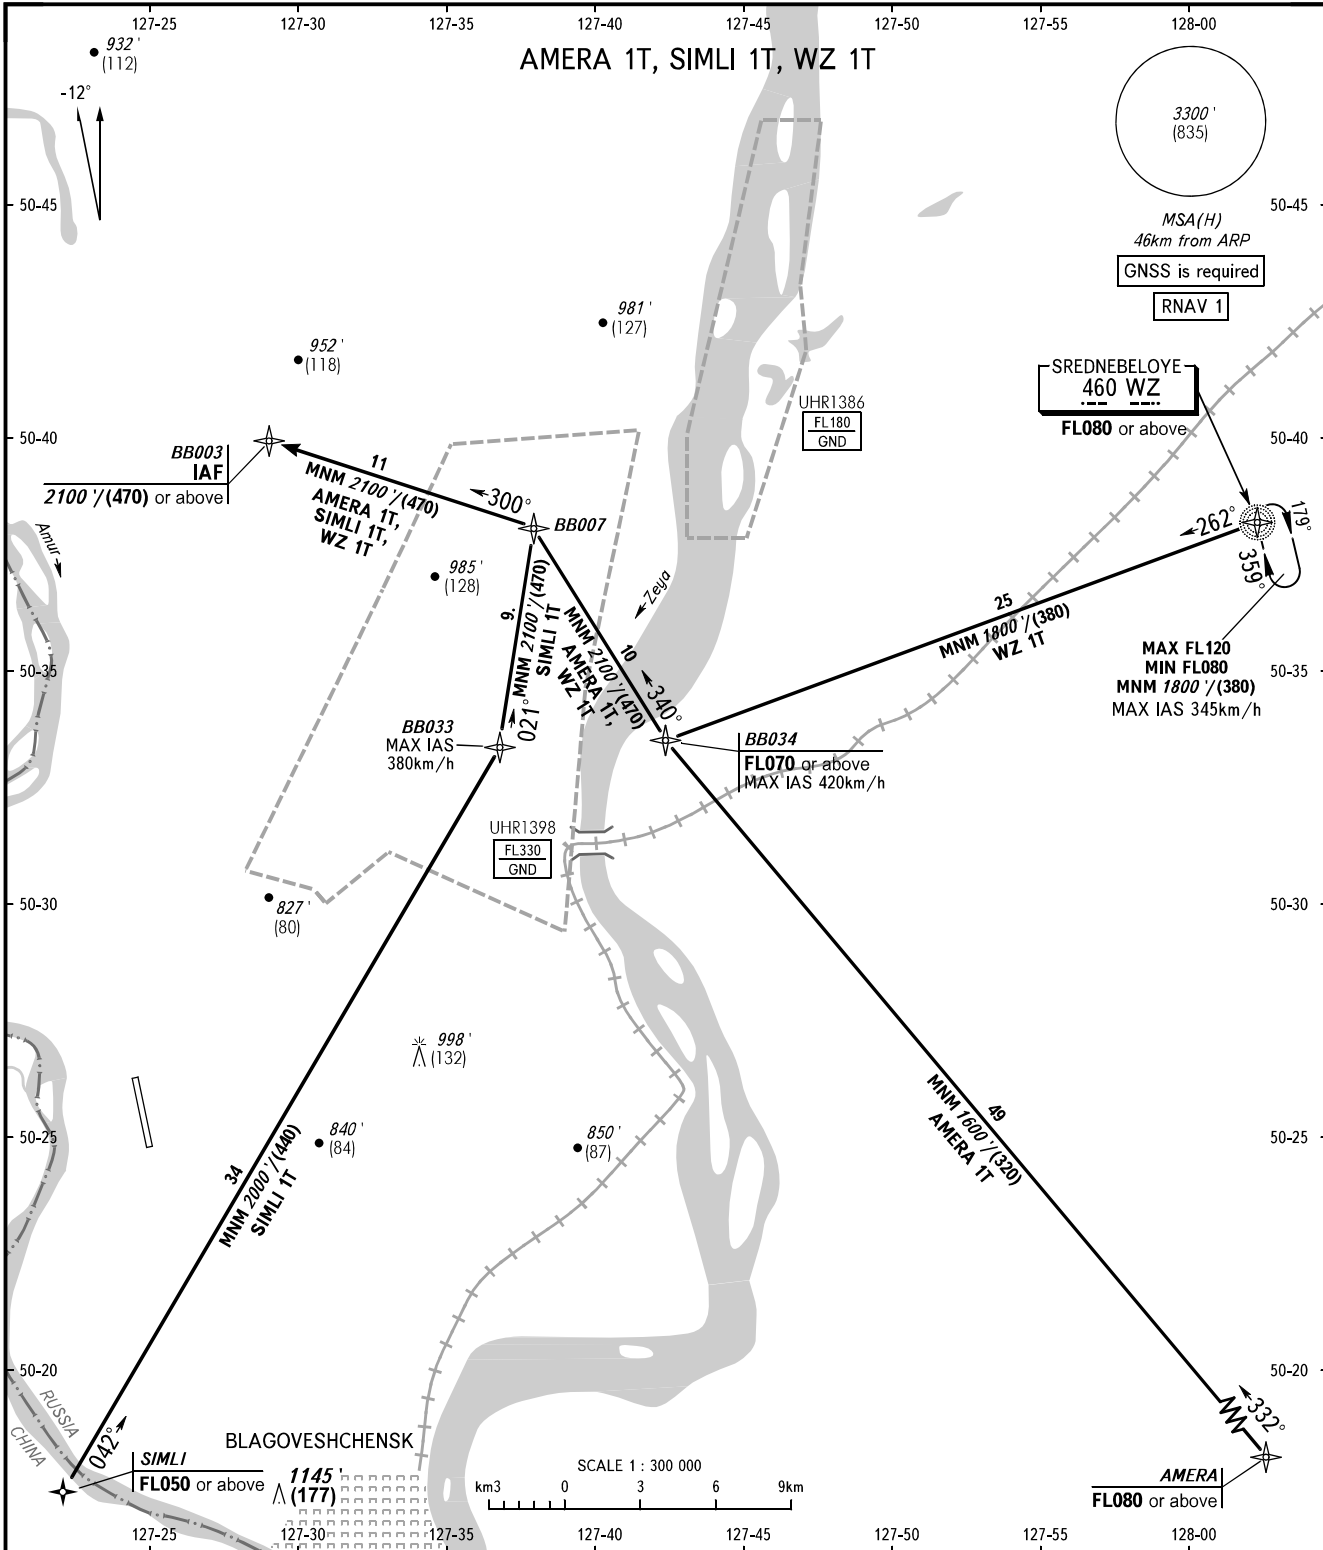

TOWER 127.200

- 1** TRANSITION LEVEL:
- FL050 when QNH is 1013 hPa (760mm mercury column) or above;
  - FL060 when QNH is 977 hPa (733mm mercury column) or above, but less than 1013 hPa (760mm mercury column);
  - FL070 when QNH is less than 977 hPa (733mm mercury column).

**WARNING:**

1. When restricted area UHR1398 is active, utilization of all routes - by coordination with ATS unit.
2. Holding area is AVBL by coordination with ATS unit.

BEARINGS AND TRACKS ARE MAGNETIC  
ALTITUDES IN FEET AND METRES  
ELEVATIONS IN FEET AND METRES  
DISTANCES IN KILOMETRES

Alt set: -QNH(QFE on req);  
-hPa(mm on req).

CHANGE: Heading, HGT