


VISUAL  
APPROACH  
CHART - ICAO

KHANTYM TOWER 118.100  
KHANTYM RADAR 120.400

KHANTY-MANSIYSK, RUSSIA  
KHANTY-MANSIYSK  
RWY 06/24

TRANSITION LEVEL: **1**  
TRANSITION ALTITUDE: 3000'

AD ELEV: 141'

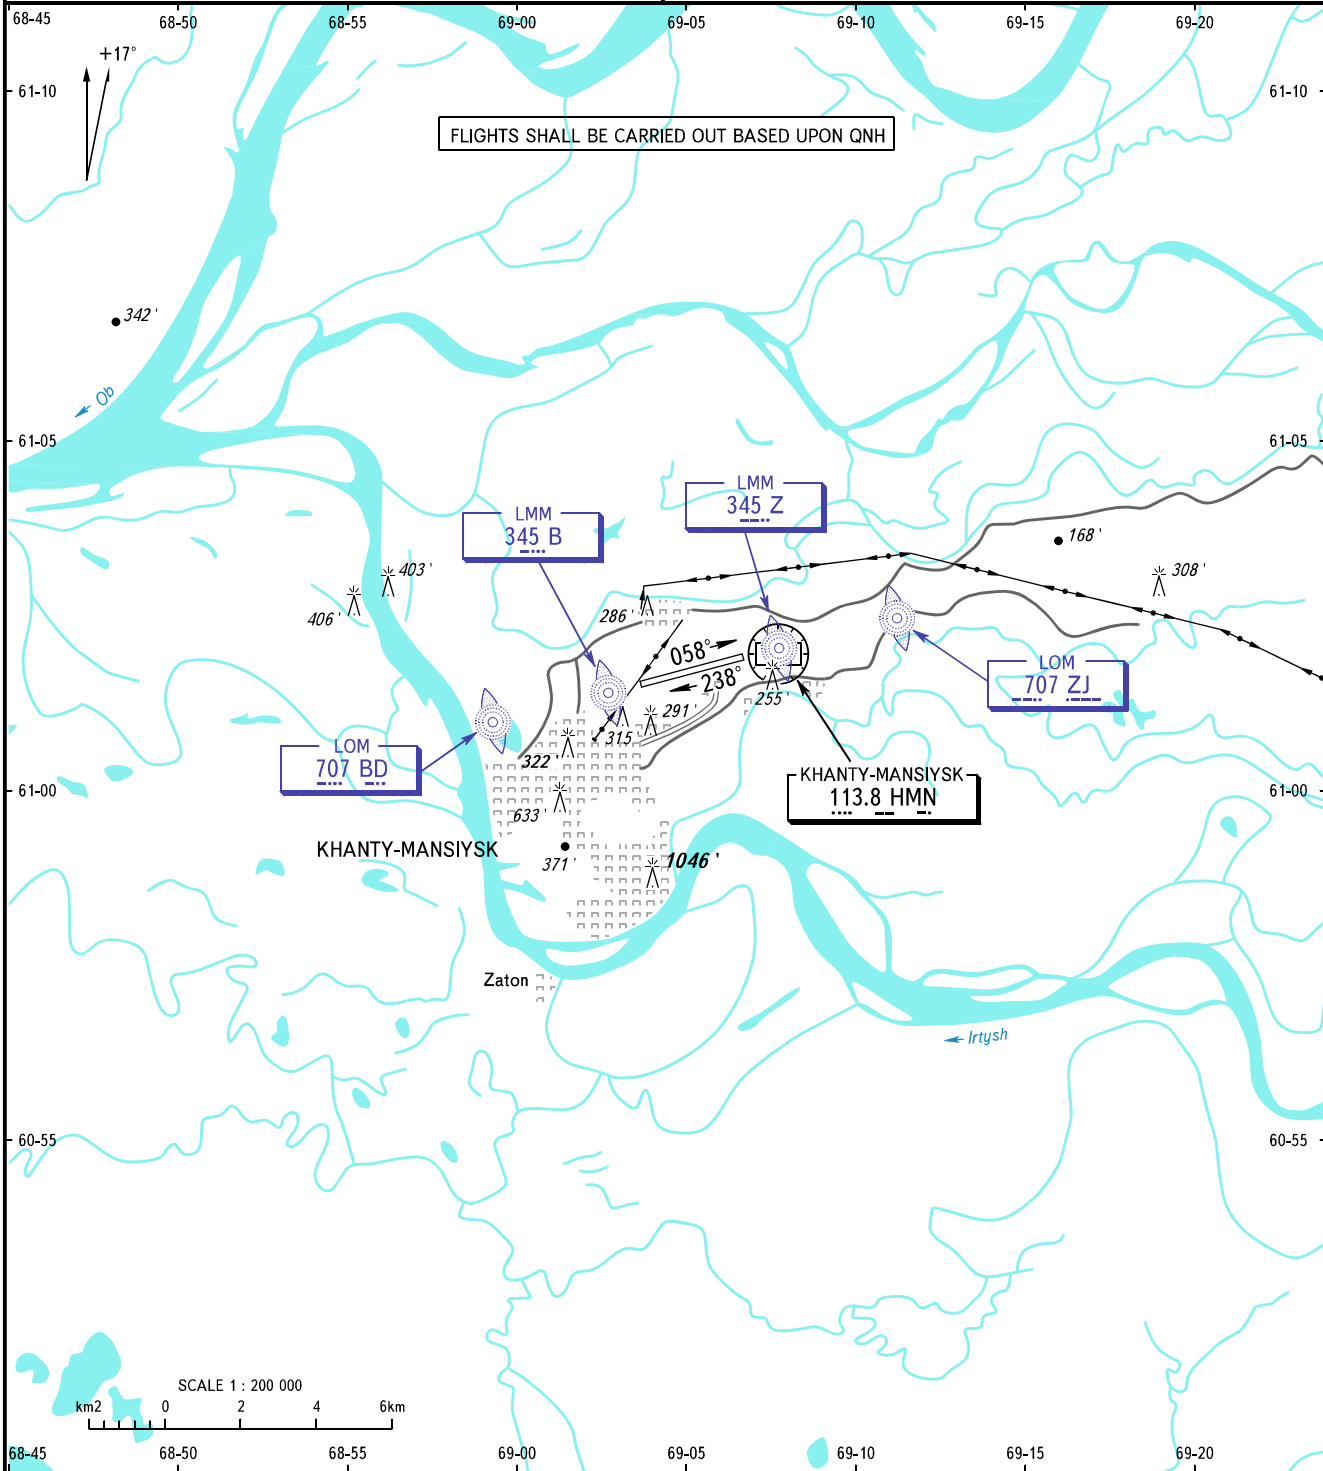

**WARNING**

Visual manoeuvring over housing areas to the north of the RWY and over the city is PROHIBITED.

**1** TRANSITION LEVEL:

- FL040 when QNH is 760mm mercury column or above;
- FL050 when QNH is 733mm mercury column or above but less than 760mm mercury column;
- FL060 when QNH is less than 733mm mercury column.

BEARINGS AND TRACKS ARE MAGNETIC  
ALTITUDES, HEIGHTS AND ELEVATIONS ARE IN FEET