BOOK 1 AD 2.1 UUWW-45 25 MAR 21

MOSCOW, RUSSIA

VNUKOVO

TOWER 118.300 **GROUND 2** 121.700

Aerodrome ground movement and aircraft parking chart on VNUKOVO 3 aprons 1, 2, 3 and 4 To the apron of Vnukovo HANGAR aircraft-repair plant-400 HANGAR NR 13 STAND LONGITUDE LATITUDE NR (N) (E) **HANGAR** 1-9 55 35.5 037 14.7 55 35.6 10, 11 037 14.7 **HANGAR** 037 14.8 55 35.6 HANGAR NR 17 **HANGAR** 13-15 55 35.5 037 14.9 16-31 55 35.5 037 14.8 HANGAR HANGAR NR 18 TERMINAL APRON 4 54 HANGAR HANGAR NR 2 HANGAR TWY C7 APRON 1 APRON 2 A-320, A-319, F-100, Tu-134 and class below HANGAR (12A) NR 5 HANGAR NR 6 (13) **APRON 3** 62 (14) (14A) (63) TWY C10 (24) (31) To the apron of Vnukovo aircraft-repair plant-400 (30) TWY C6 TWY C9 TWY C2 TWY C3 TWY C4 TWY M2 TWY M2 TWY M2 **TWY A11 TWY A10** TWY A9 Not to scale

AIRCRAFT PARKING

CHART - ICAO

- 1. TWY C9 is AVBL for taxiing after the "FOLLOW ME" vehicle of the following ACFT: An-12, Tu-134, Yak-42; A-320 and its modifications; A-321 and its modifications; A-318 and its modifications; A-319 and its modifications; B737 and its modifications; MD-82, MD-88, ATR-72 and its modifications; ATR-42 and its modifications; BAe-125-800; EMB-120; CRJ-100/200, CRJ-200 and its modifications; Cessna 421; Hawker 125-700; BD-700 Global Express; Gulfstream 5; SAAB 2000 and its modifications; Learjet 31 (35, 40, 45, 55, 60) and their modifications; EMB-135, EMB-145, SAAB 340 and their modifications; Hawker 400 (700, 750, 800XR, 1000), BAe-125-700 and their modifications; Challenger 300, Challenger 601, Challenger 604, Challenger 605. Challenger 850 and their modifications; Cessna 525 (550, 560, 650, 680, 750), Premier 1 and their modifications; Gulfstream 100 (200, 350, 450, 500, 550), Gulfstream 4, Gulfstream 5, Global 5000 and their modifications; Fokker 70 (100) and their modifications; Falcon 10 (20, 50, 900, 2000), Falcon 7X and their modifications; An-148, An-72, An-74, An-24, An-26, An-28 and its modifications; II-114 and other class 3 and 4 ACFT, helicopters of all types.
- 2. Taxiing of Tu-134, Gulfstream 5, Global Express and class below ACFT is allowed through vacant stand 11 after the "FOLLOW ME" vehicle, blocking transport routes in the vicinity of stands 22 and 13A.
- 3. Taxiing of CL-604, Falcon 900 and class below ACFT is allowed through vacant stand 6 and then through stands 26, 18 after the "FOLLOW ME" vehicle, blocking transport routes in the vicinity of stands

PZ - 90.02 coordinates APRON 1:

Surface - PAG stabs

Strength: Stands 32-34 - PCN 47/R/A/X/T (mixed)

APRON 2:

Surface - Concrete

Strength: Stands 1-11 - PCN 15/R/B/Y/T (mixed)

APRON 3:

Surface - Concrete

Strength: Stands 12-31 - PCN 15/R/B/Y/T (mixed)

APRON 4:

Strength: Stands 35-52 - PCN 16/R/B/Y/T (mixed) Stands 53-78 - PCN 52/R/B/X/T (mixed)

Allocation of ACFT stands on VNUKOVO 3

aprons 1, 2 and 3

TWY AVBL for ACFT towing and taxiing:

Yak-42, Gulfstream 5, Global Express, Tu-134 and

TWY C5 Tu-134, Gulfstream 5, Global Express and class below TWY C7 Tu-134, Gulfstream 5, Global Express, Falcon 900 and

ACFT types: STANDS: F-900 ACFT and class below 2-5, 16, 21, 22, 28 Gulfstream 4 and class below 6-10, 17, 19, 20 12A, 12B, 13A, 13B, 14A, 14B, 15A, 15B, CL-604 and class below 23-26, 29-31 LJ60, Cessna 650 and class below 1, 2A, 2B, 3A, 3B Tu-134, Gulfstream 5, Global Express, Yak-40 and class below 11, 18, 27, 34 Yak-42, Tu-134, Gulfstream 5 and class below 12-15 B737 and its modifications, B757-200, A-319, F-100, Tu-154 and class below 32

WARNING:

- 1. Parking of ACFT onto stands 1-5, 2A, 2B, 3A, 3B, 8-10 shall be carried out by towing only.
- 2. Parking of ACFT onto the following stands shall be carried out under own engines power: 6, 7, 11, 12, 12A, 12B, 13, 13A, 13B, 14, 14A. 14B, 15, 15A, 15B, 16-26, 27 (when stand 18 is vacant), 28 (when stand 27 is vacant), 29-34. Parking of ACFT onto stands 21-22 shall be carried out via vacant stands 23-25. Parking of ACFT onto stands 23-25 shall be carried out via vacant stands 21-22. Parking of Gulfstream 4 and class below ACFT onto stand 27 shall be carried out via stand 19 only

33

- 3. Taxiing out of the following stands shall be carried out under own engines power: 1-5, 2A, 2B, 3A, 3B (when rear stands of the apron of the rocket-space corporation "Energy" are vacant respectively), 6 (when stand 31 is vacant), 7-8 (when stand 23 is vacant), 9-10 (when stand 22 is vacant), 11-15, 12A, 12B, 15A, 15B, 16, 17 (when stand 28 is vacant), 18 and 28 (when stand 27 is vacant), 19-26, 27 (when stand 18 is vacant, for Tu-134 ACFT - when stands 18, 26 are vacant).
- 4. Taxiing out of the following stands shall be carried out by towing: 7-8 (when stand 23 is occupied), 9-10 (when stand 22 is occupied), 17 (when stand 28 is occupied), 18 (when stand 27 is occupied), 27 (when stand 18 is occupied, for Tu-134 ACFT - when stands 18, 26 are occupied), 29-31; 33, 34, from stand 23 to stand 24, from stand 24 to stand 25, from stand 21 to stand 22, from stand 26 to stand 27, from stand 24 to stand 25, from stand 25 to stand 26, from stand 27 t
- 5. When stands 32, 34 are occupied, towing of ACFT into/out of hangar is prohibited.
- 6. When stand 33 is occupied, towing of ACFT into/out of hangar 4 is prohibited.
- 7. When stand 34 is occupied, towing of ACFT into/out of hangar 3 is prohibited.

Federal Air Transport Agency