


AERODROME GROUND MOVEMENT CHART - ICAO

SIVKAR START 124.600

SYKTYVKAR, RUSSIA

SYKTYVKAR

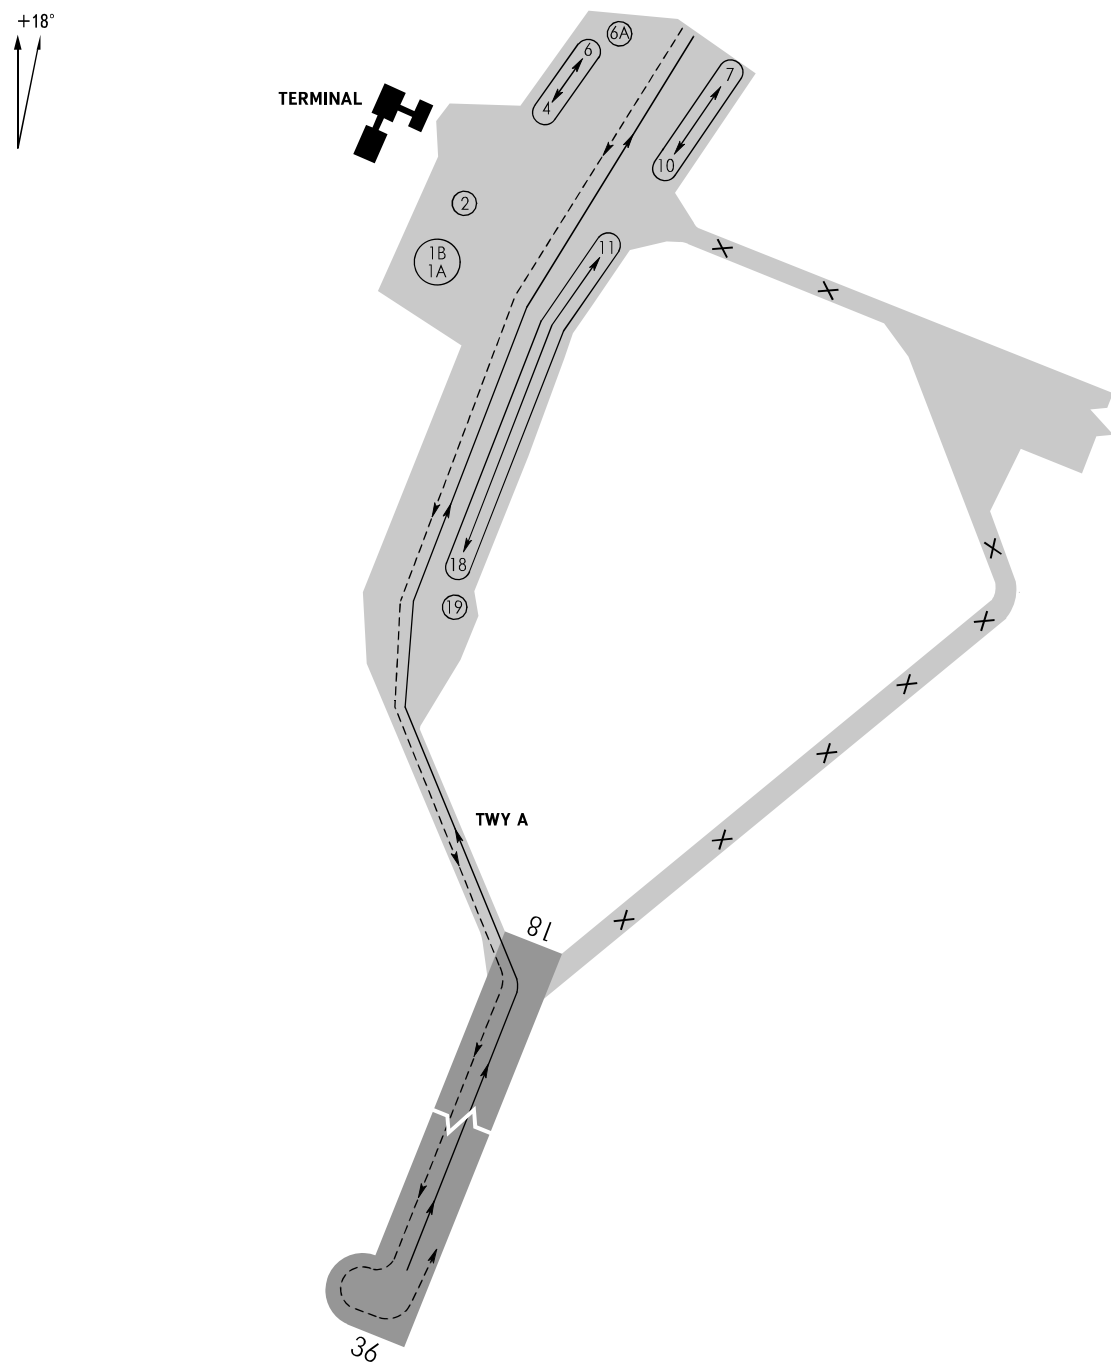

Not to scale

APRON:

Surface: Asphalt-Concrete

Strength:

Stands: 1A, 1B, 2, 8-10 - PCN 28/R/B/X/T
4-6, 6A - PCN 30/R/B/X/T
7, 11-18 - PCN 37/F/D/X/T
19 - PCN 47/F/D/X/T

TAXIWAYS:

Width: A - 20m
Surface: A - Asphalt-Concrete
Strength: A - PCN 51/F/D/X/T

WARNING:

1. RWY 36/18 is AVBL for flight operations of Mi-2, Mi-8 HEL, flights operations in sector 193°-355° (over the city) are PROHIBITED.
2. Taxiing of Mi-2, Mi-8 HEL into/out of stands 15-18 is permitted through stand 19 in accordance with the marking.
3. AD does not provide arrival/departure of HEL on skid landing gear.
4. AD is not AVLB for APR/DEP of cargo ACFT carrying dangerous goods on board due to absence of a stand equipped for handling dangerous goods at the AD.