


VFR
ARRIVAL
CHART

BOVANENKOVO, RUSSIA
BOVANENKOVO
RWY 10

TRANSITION
LEVEL: ①

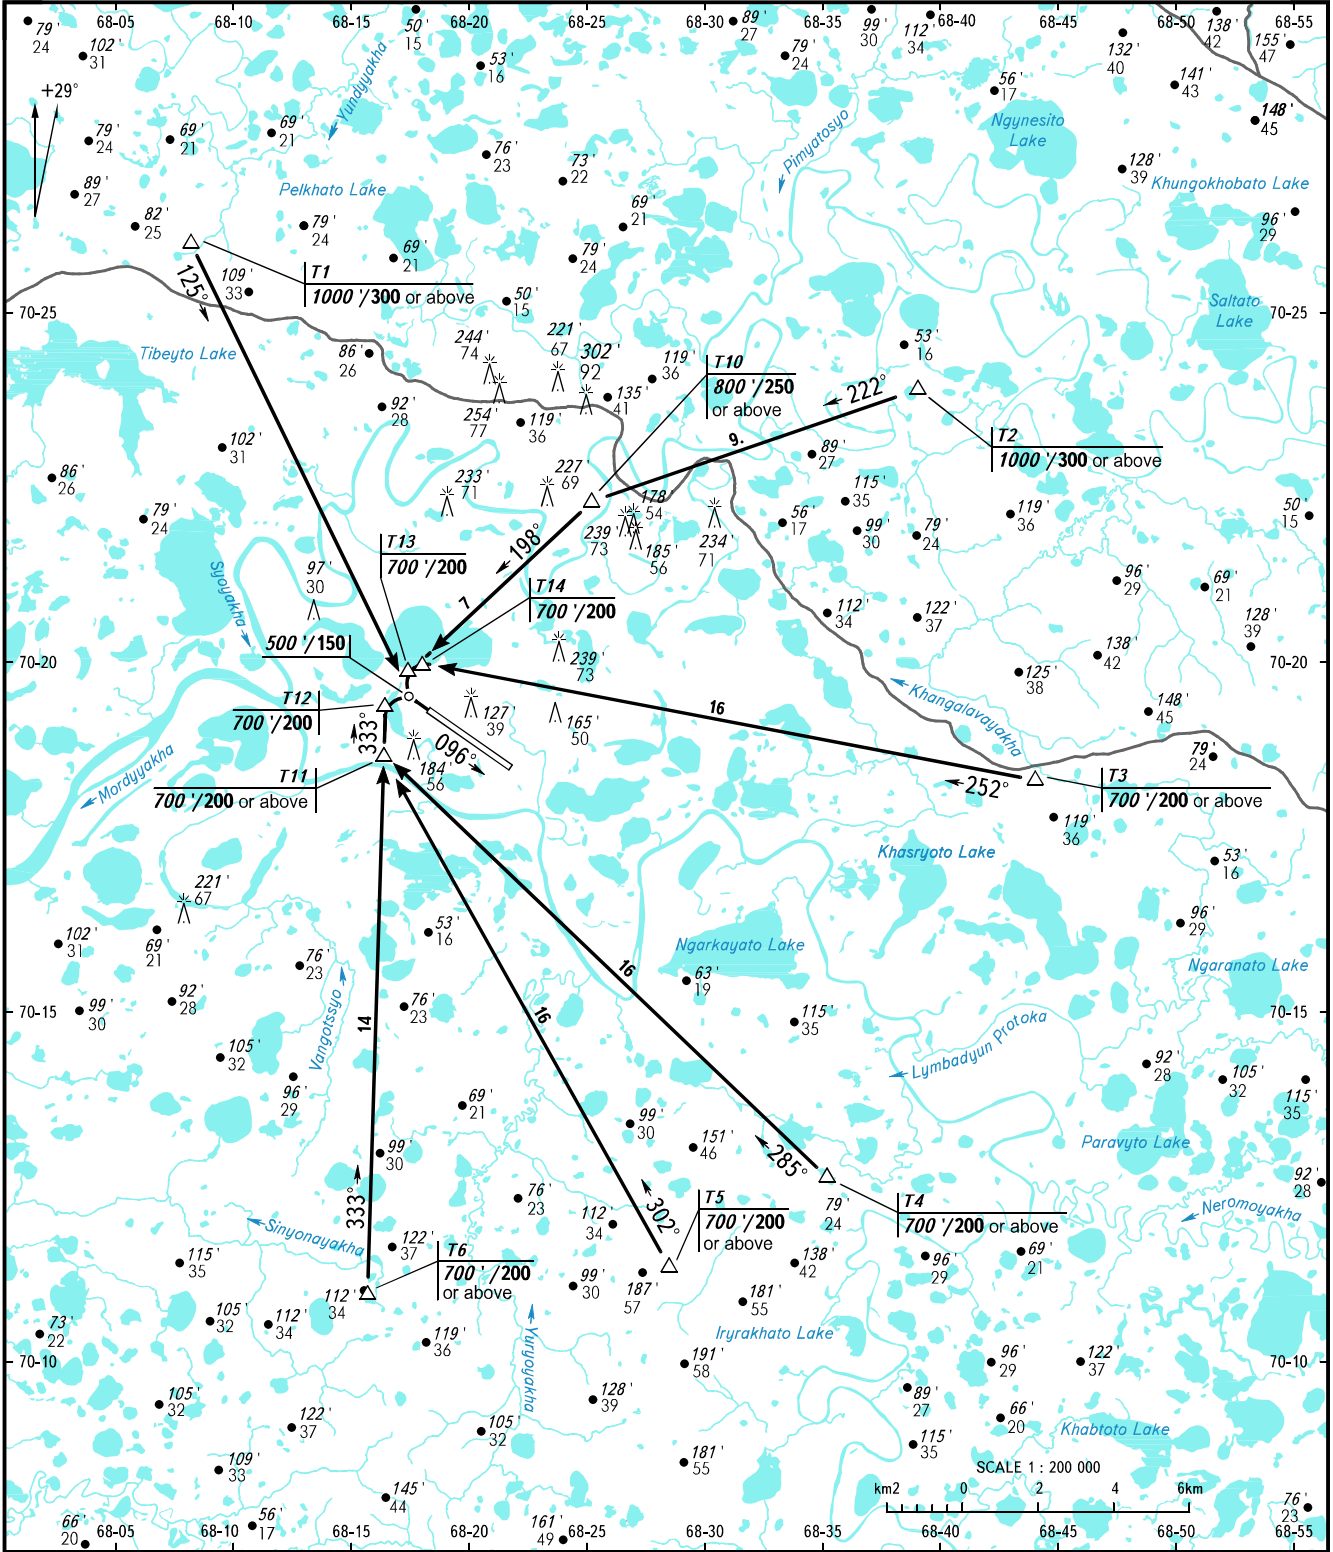

BOVANENKOVO INFORMATSIYA **126.000**
SALEKHARD INFORMATSIYA Sector North **128.000** 0300-1700
SALEKHARD INFORMATSIYA Sector South **125.200** 1700-0300

- ① TRANSITION LEVEL:
- FL060 when QNH is 1013 hPa (760mm mercury column) or above;
 - FL070 when QNH is 977 hPa (733mm mercury column) or above, but less than 1013 hPa (760mm mercury column);
 - FL080 when QNH is less than 977 hPa (733mm mercury column).

BEARINGS AND TRACKS ARE MAGNETIC
ALTITUDES AND ELEVATIONS IN FEET AND METRES
DISTANCES IN KILOMETRES

Alt set: -QNH(QFE on req);
-hPa(mm on req).