


# VFR ARRIVAL CHART

## BOVANENKOVO, RUSSIA

### BOVANENKOVO

### RWY 28

TRANSITION LEVEL: **1**

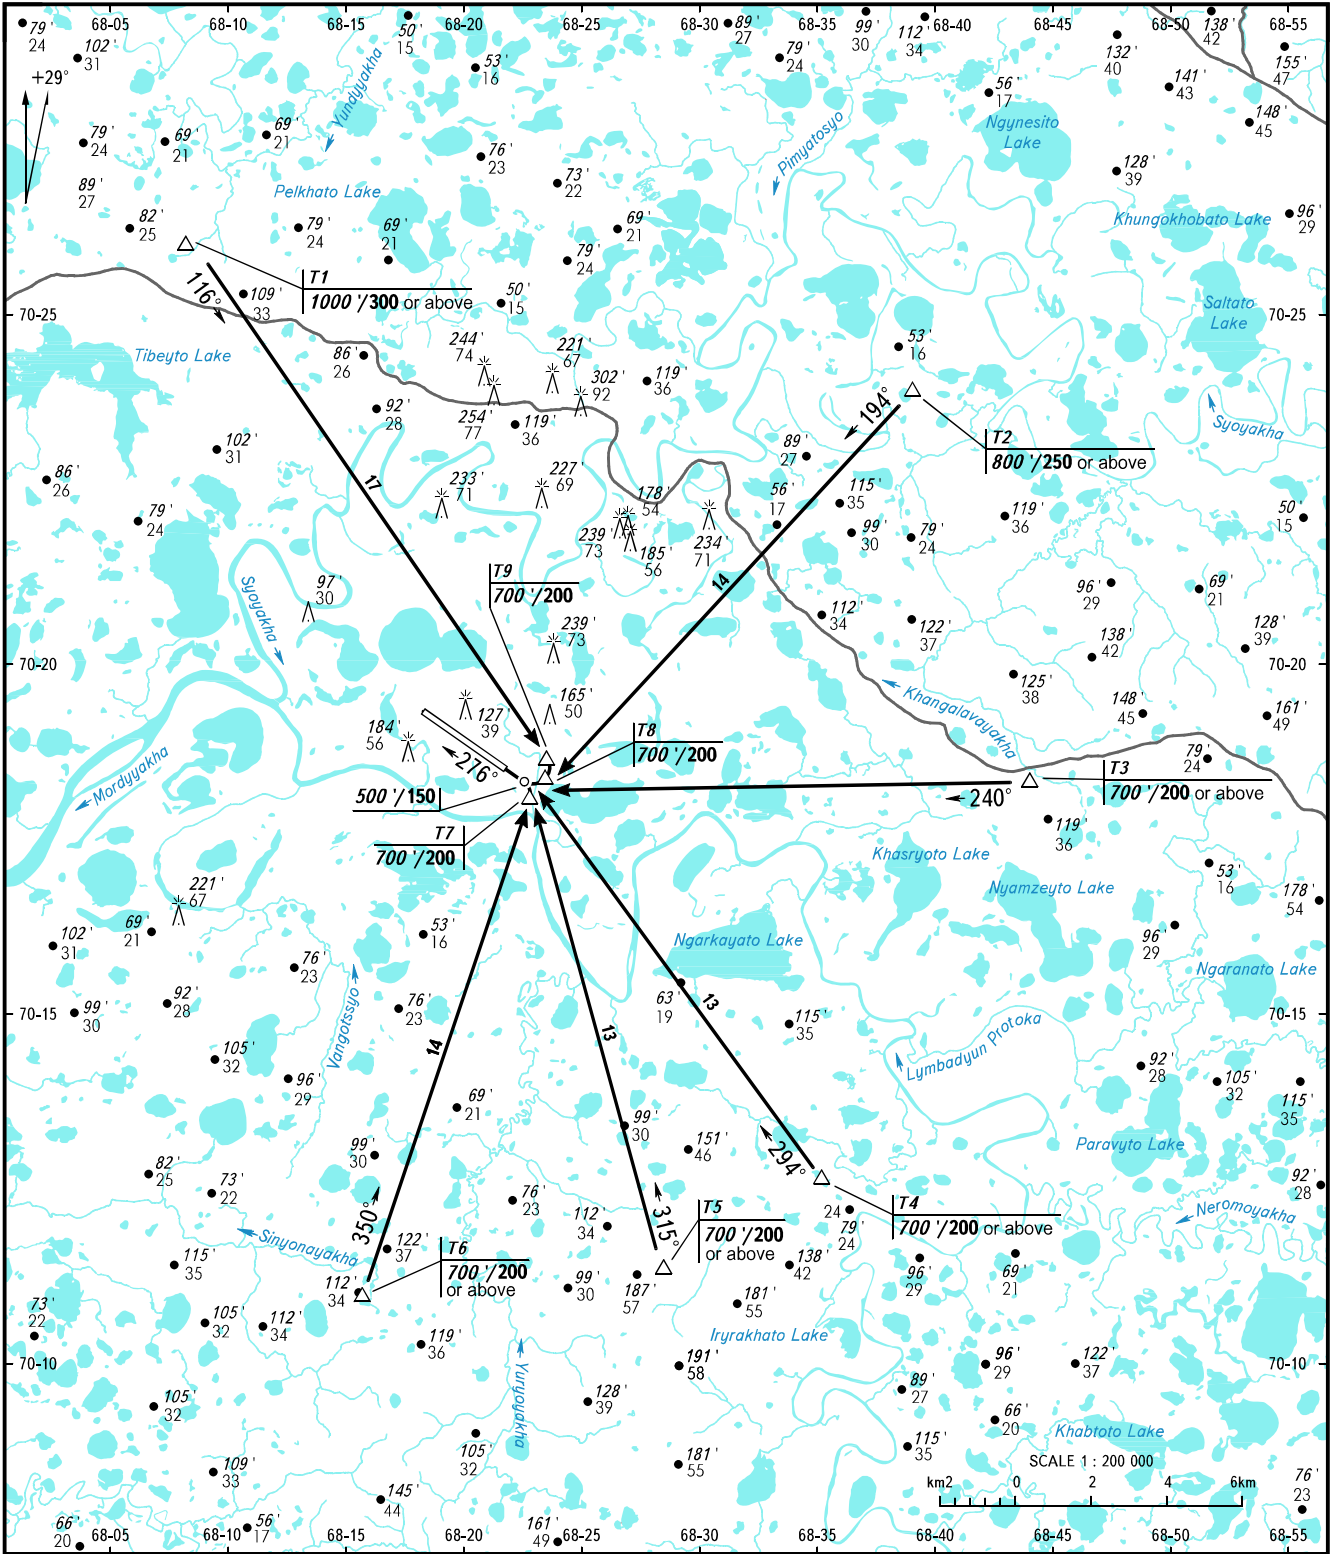

BOVANENKOVO INFORMATSIYA	<b>126.000</b>
SALEKHARD INFORMATSIYA Sector North	<b>128.000</b> 0300-1700
SALEKHARD INFORMATSIYA Sector South	<b>125.200</b> 1700-0300

**1** TRANSITION LEVEL:

- FL060 when QNH is 1013 hPa (760mm mercury column) or above;
- FL070 when QNH is 977 hPa (733mm mercury column) or above, but less than 1013 hPa (760mm mercury column);
- FL080 when QNH is less than 977 hPa (733mm mercury column).

BEARINGS AND TRACKS ARE MAGNETIC  
 ALTITUDES AND ELEVATIONS IN **FEET** AND METRES  
 DISTANCES IN KILOMETRES

Alt set: -QNH(QFE on req);  
 -hPa(mm on req).