


STANDARD ARRIVAL CHART
INSTRUMENT (STAR) - ICAO

TRANSITION
LEVEL: **1**

SALEKHARD, RUSSIA
SALEKHARD
RNAV Rwy 04

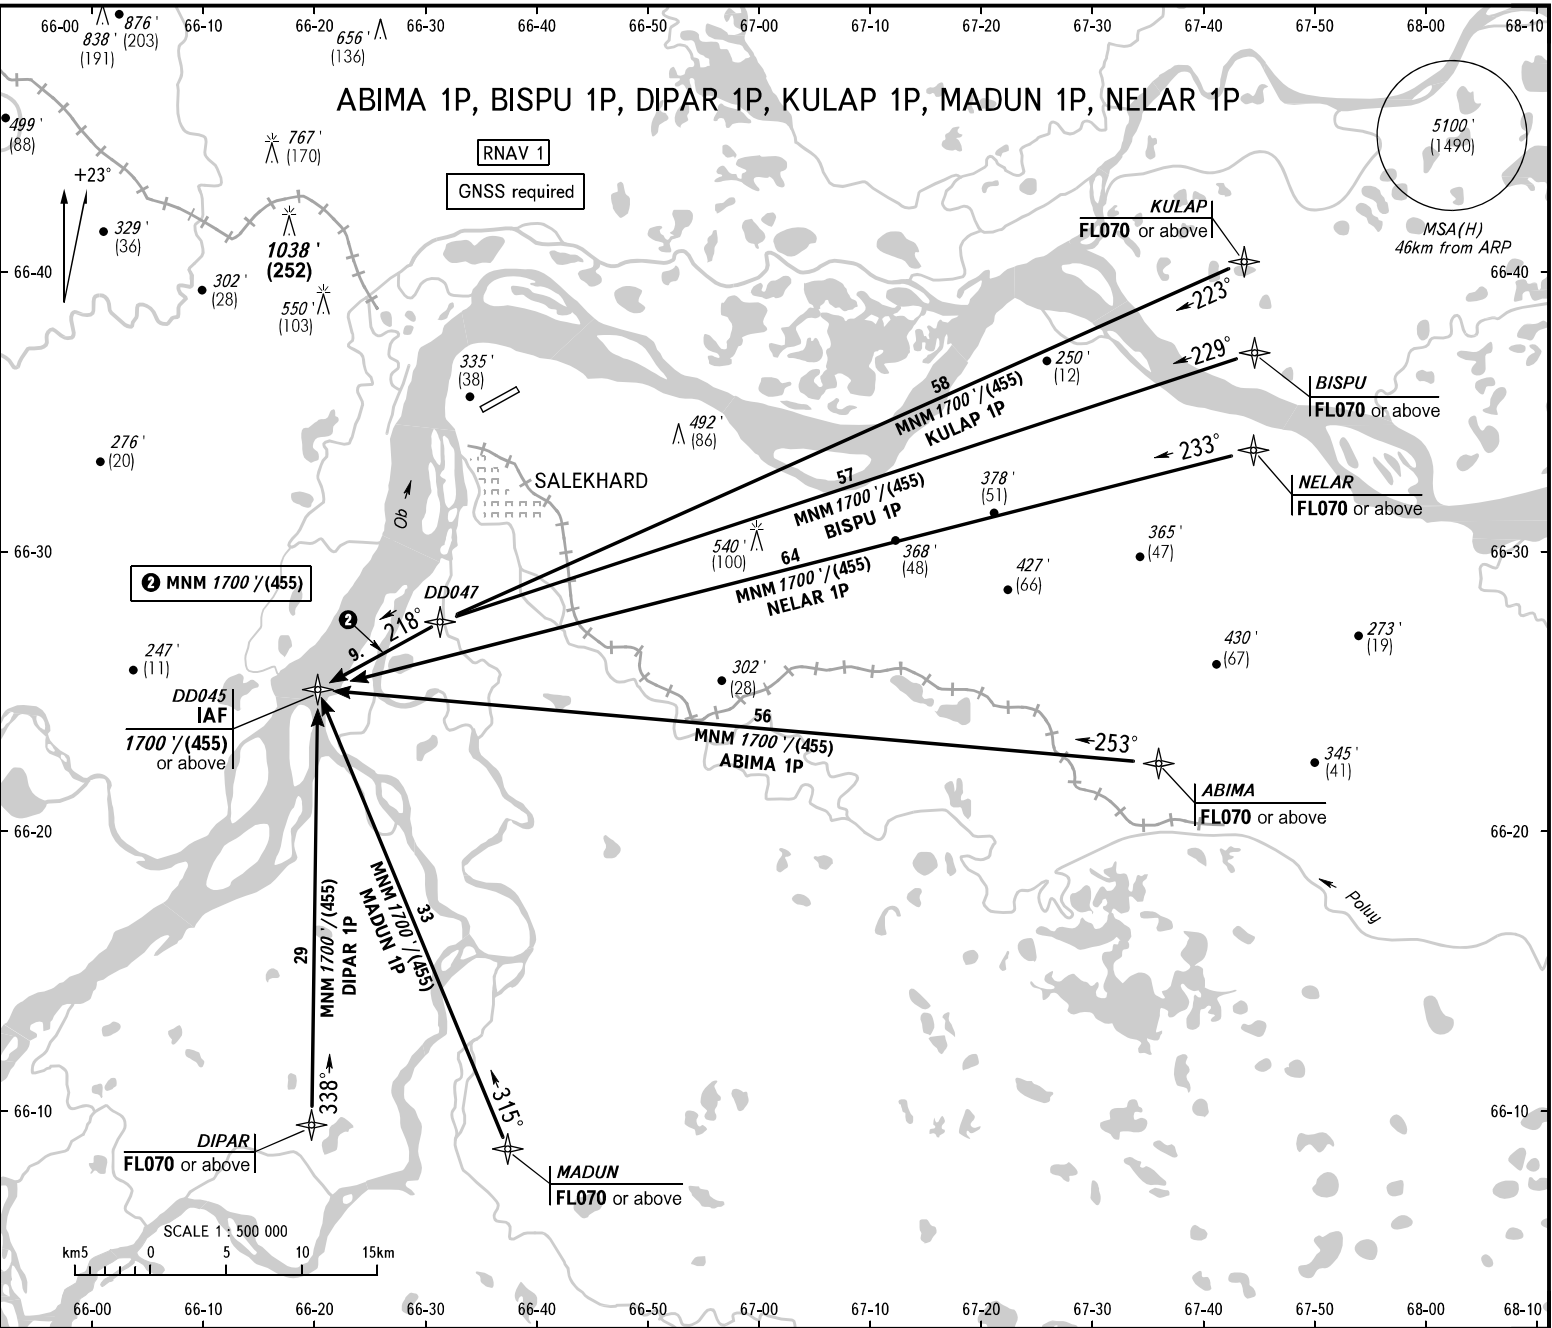

KRUG
START
120.800
118.600

BEARINGS AND TRACKS ARE MAGNETIC
ALTITUDES IN FEET
ELEVATIONS IN FEET AND METRES
HEIGHTS IN METRES
DISTANCES IN KILOMETRES

Alt set: -QN(H)/QNH on req.;
-hPa (mm on req.)

1 TRANSITION LEVEL:
 - FLO70 when QNH is 984 hPa (738mm mercury column) or above;
 - FLO80 when QNH is 948 hPa (711mm mercury column) or above,
 but less than 984 hPa (738mm mercury column);
 - FLO90 when QNH is less than 948 hPa (711mm mercury column).

