


STANDART ARRIVAL CHART
INSTRUMENT (STAR) - ICAO

SOVETSKIY, RUSSIA
SOVETSKIY
RWY 12/30

TRANSITION LEVEL: ①

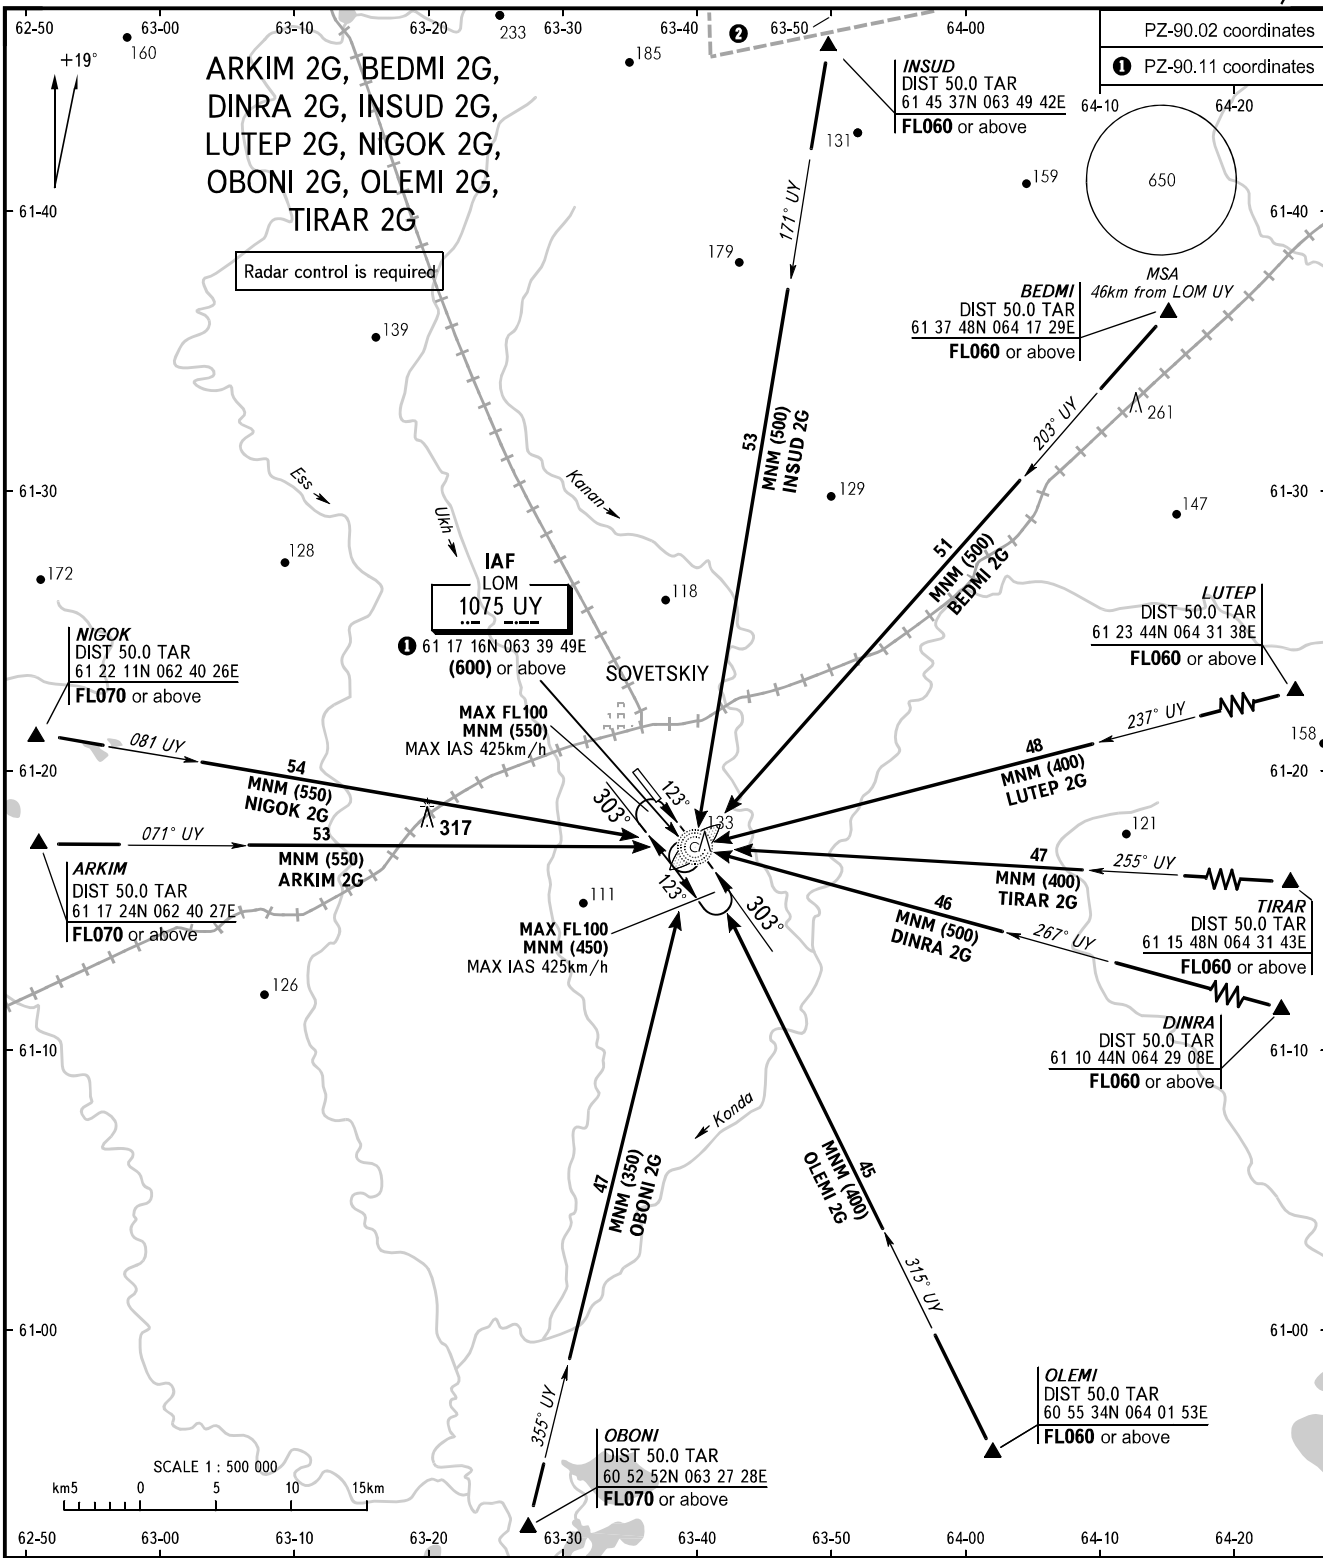

SOVETSKIY TOWER 120.800

- ① TRANSITION LEVEL:
 - FL040 when QFE is 750mm mercury column or above;
 - FL050 when QFE is 723mm mercury column or above, but less than 750mm mercury column;
 - FL060 when QFE is less than 723mm mercury column.

② USR966
500m / 1600' AGL
GND

BEARINGS AND TRACKS ARE MAGNETIC
ALTITUDES, HEIGHTS AND ELEVATIONS IN METRES
DISTANCES IN KILOMETRES

Alt set: -QFE(QNH on req);
-mm(hPa on req).

CHANGE: New chart