


STANDART ARRIVAL CHART  
INSTRUMENT (STAR) - ICAO

SOVETSKIY, RUSSIA  
SOVETSKIY  
RNAV Rwy 12

TRANSITION LEVEL: ①

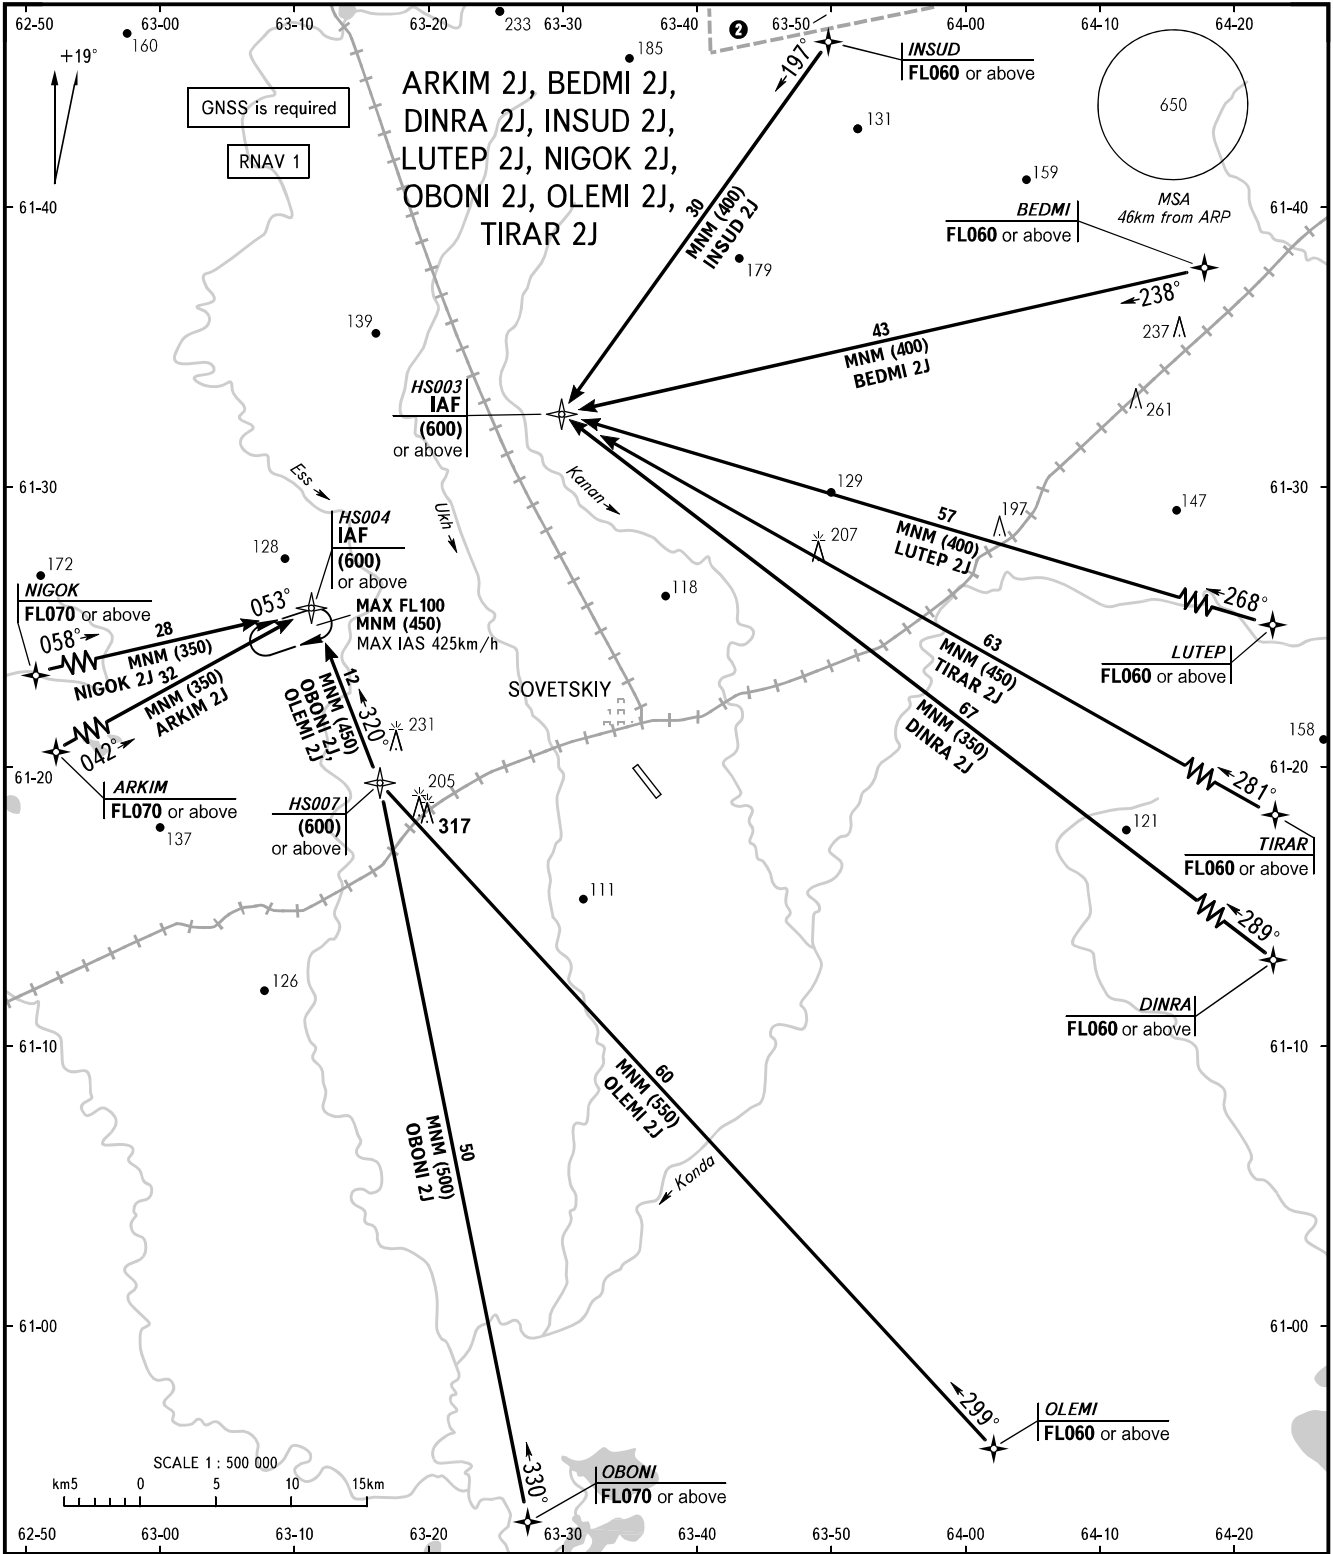

SOVETSKIY TOWER 120.800

- ① TRANSITION LEVEL:  
- FL040 when QFE is 750mm mercury column or above;  
- FL050 when QFE is 723mm mercury column or above, but less than 750mm mercury column;  
- FL060 when QFE is less than 723mm mercury column.

② USR966  
500m/1600' AGL  
GND

BEARINGS AND TRACKS ARE MAGNETIC  
ALTITUDES, HEIGHTS AND ELEVATIONS IN METRES  
DISTANCES IN KILOMETRES

Alt set: -QFE(QNH on req);  
-mm(hPa on req).

CHANGE: New chart