STANDARD ARRIVAL CHART INSTRUMENT (STAR) - ICAO

TRANSITION LEVEL: ❶

KRASNODAR, RUSSIA
PASHKOVSKIY
RWY 05R

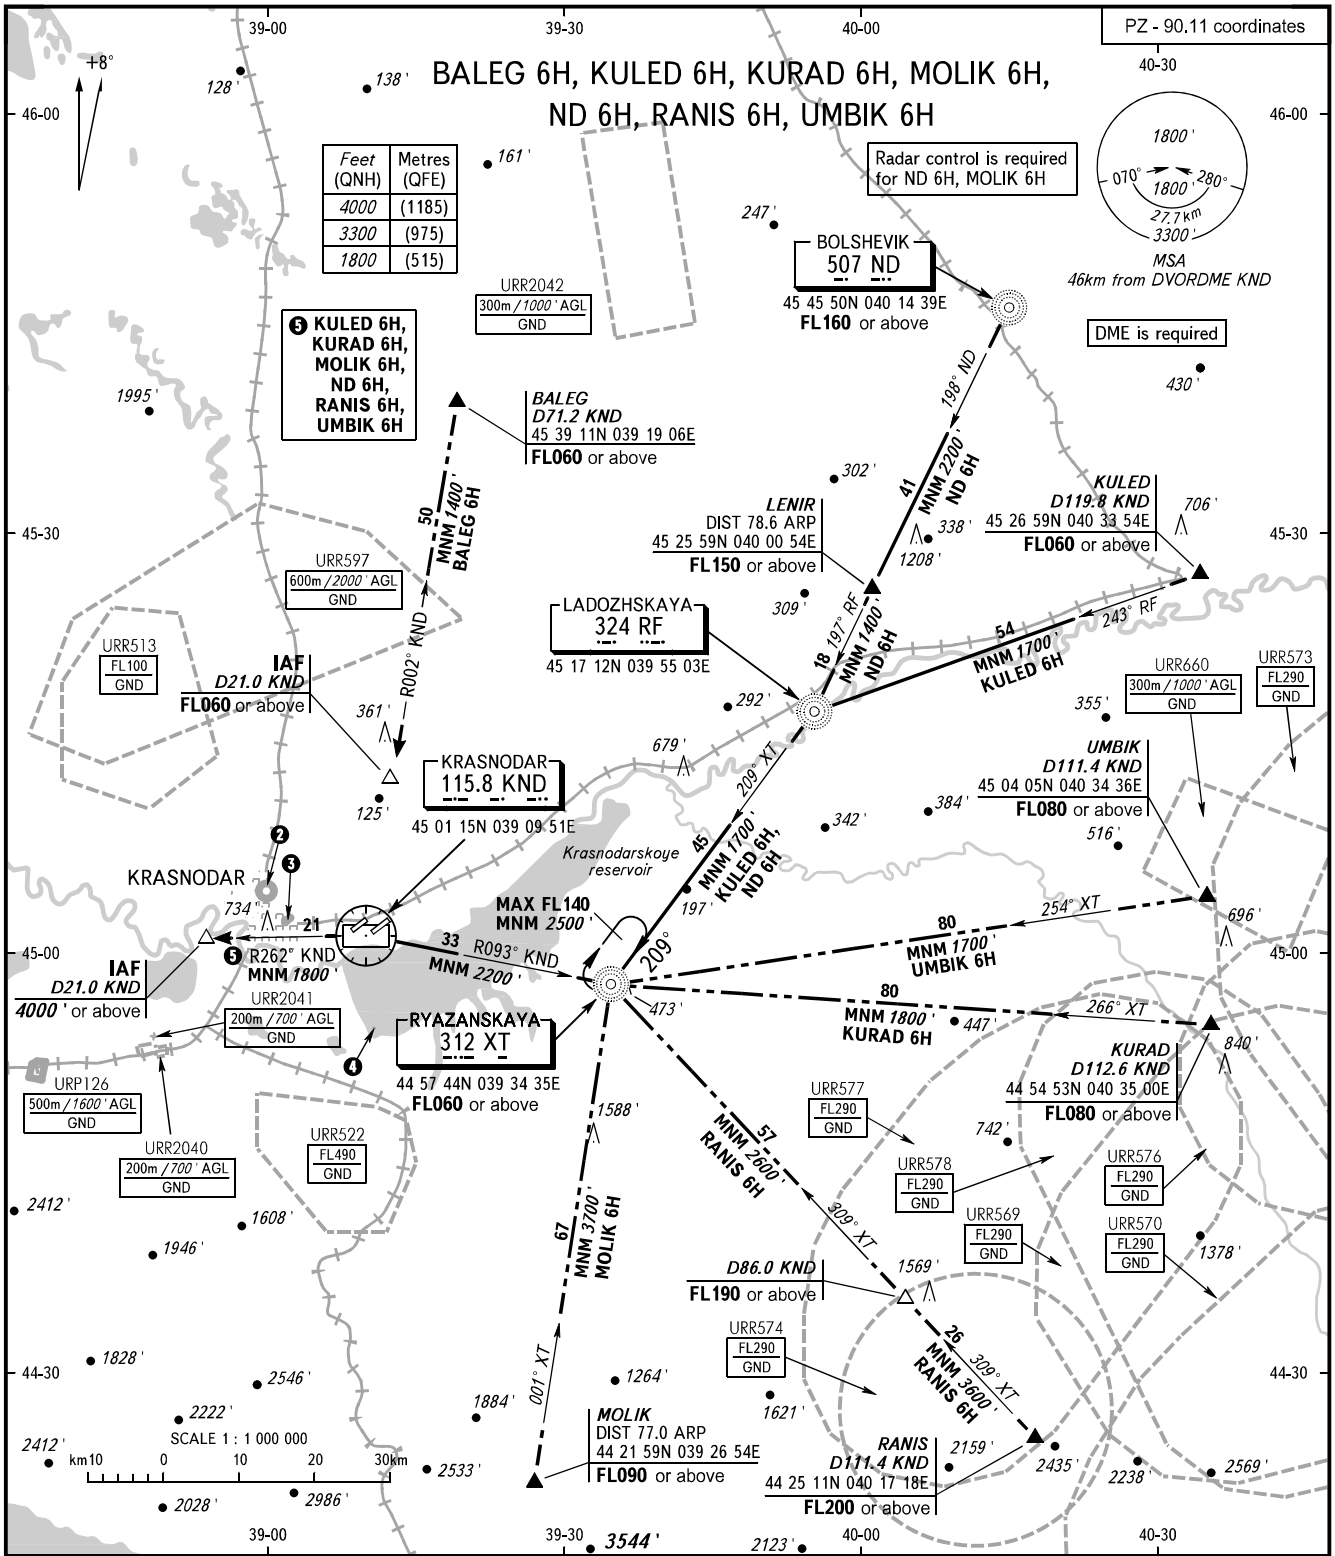

APPROACH	Sector WEST	127.700
	Sector EAST	129.600
RADAR		121.300
TOWER		118.200

❷ URP128 500m/1600 ' AGL GND

❸ URP132 500m/1600 ' AGL GND

❹ URR542 100m/300 ' AGL GND

❶ TRANSITION LEVEL:
- FL060 when QNH is 977 hPa (733mm mercury column) or above;
- FL070 when QNH is 941 hPa (706mm mercury column) or above, but less than 977 hPa (733mm mercury column).

NOTE:
1. When URR577, URR578, URR576, URR573, URR569 are active, STAR KURAD 6H is not AVBL.
2. When URR574, URR577, URR578, URR569 are active, STAR RANIS 6H is not AVBL.
3. When URR578, URR573, URR577, URR576, URR569 are active, STAR UMBIK 6H is not AVBL.

BEARINGS AND TRACKS ARE MAGNETIC
ALTITUDES AND ELEVATIONS IN *FEET*
DISTANCES IN KILOMETRES

Alt set: -QNH(QFE on req);
-hPa(mm on req).

CHANGE: New chart