STANDARD ARRIVAL CHART INSTRUMENT (STAR) - ICAO

TRANSITION LEVEL: ❶

YUZHNO-SAKHALINSK, RUSSIA
KHOMUTOVO
RWY 01

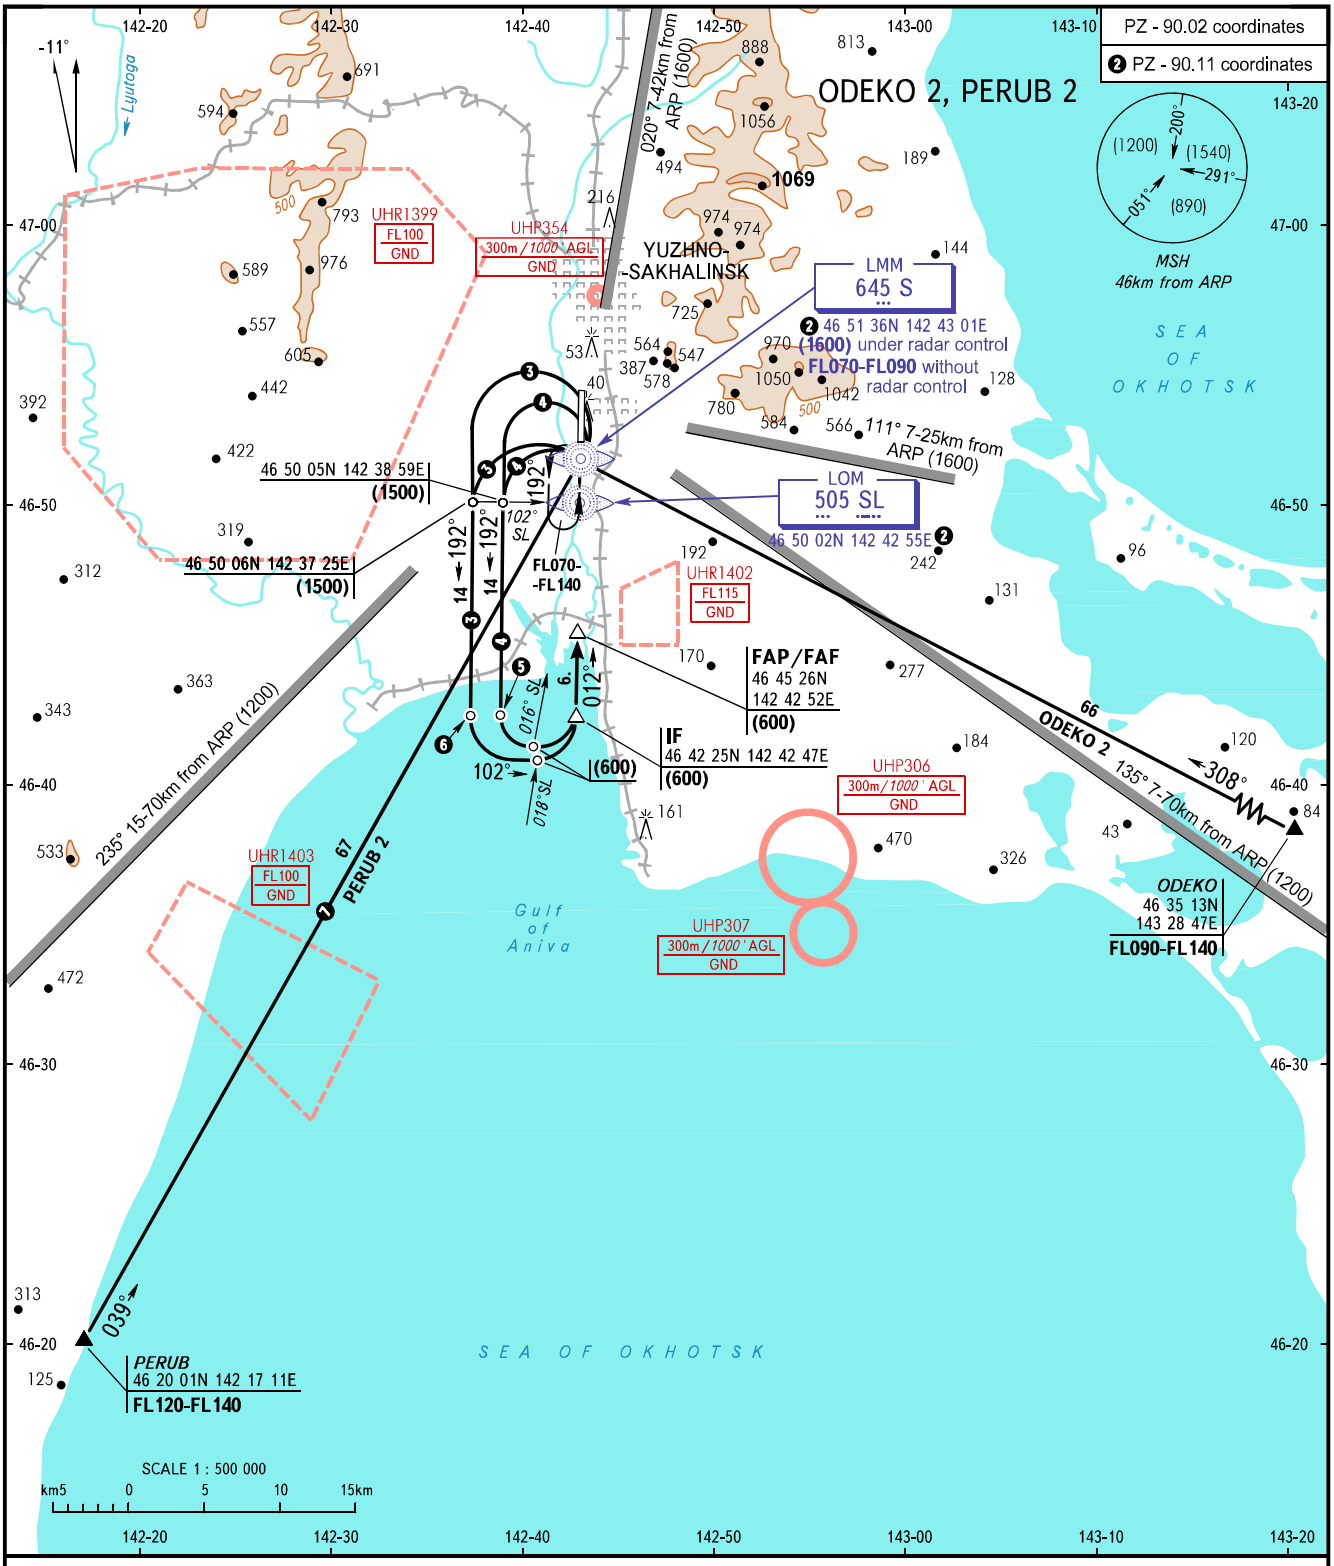

RADAR	**120.600**
TOWER	**122.000**

❸ CAT C, D ACFT
❹ CAT A, B ACFT

❺ *QDM 030° SL*	❻ *QDM 037° SL*
46 42 28N 142 38 52E	46 42 28N 142 37 18E
(900)	**(900)**

❼ STAR PERUB 2 is AVBL when restricted area UHR1403 is not active.

❶ TRANSITION LEVEL:
- FL070 when QFE is 758mm mercury column or above;
- FL080 when QFE is 731mm mercury column or above, but less than 758mm mercury column;
- FL090 when QFE is less than 731mm mercury column.

BEARINGS AND TRACKS ARE MAGNETIC
ALTITUDES, HEIGHTS AND ELEVATIONS IN METRES
DISTANCES IN KILOMETRES

Alt set: -QFE(QNH on req);
-mm(hPa on req).

CHANGE: New chart