STANDARD ARRIVAL CHART INSTRUMENT (STAR) - ICAO

TRANSITION LEVEL: ❶

KRASNODAR, RUSSIA
PASHKOVSKIY
RWY 05R/23L

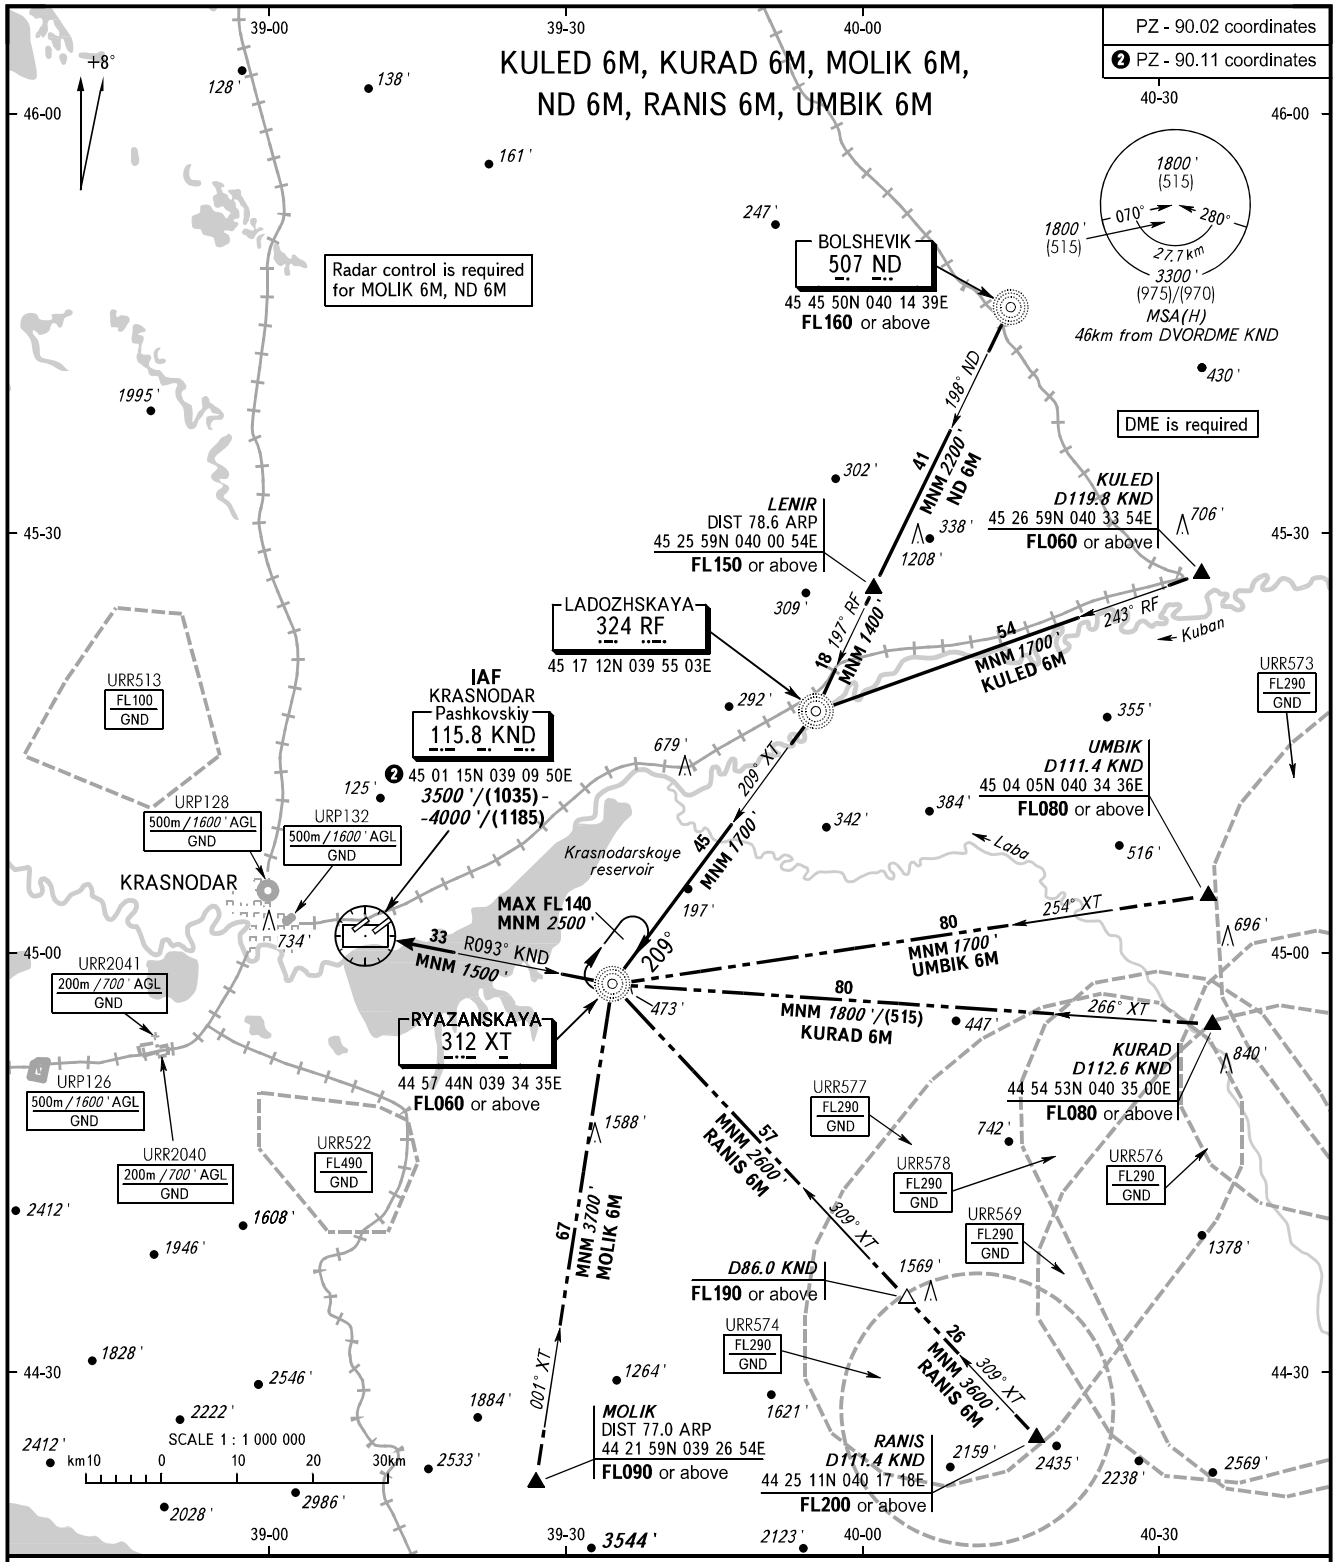

APPROACH	Sector WEST	**127.700**
	Sector EAST	**129.600**
RADAR		**121.300**
TOWER		**118.200**

❶ TRANSITION LEVEL:
- FL060 when QNH is 977 hPa (733mm mercury column) or above;
- FL070 when QNH is 941 hPa (706mm mercury column) or above, but less than 977 hPa (733mm mercury column).

NOTE:
1. When URR577, URR578, URR576, URR573, URR569 are active, STAR KURAD 6M is not AVBL.
2. When URR574, URR577, URR578, URR569 are active, STAR RANIS 6M is not AVBL.
3. When URR578, URR573, URR577, URR576, URR569 are active, STAR UMBIK 6M is not AVBL.

BEARINGS AND TRACKS ARE MAGNETIC
ALTITUDES AND ELEVATIONS IN *FEET*
HEIGHTS IN METRES
DISTANCES IN KILOMETRES

Alt set: -QNH(QFE on req);
-hPa(mm on req).

CHANGE: Heading, URR