STANDARD ARRIVAL CHART INSTRUMENT (STAR) - ICAO

TRANSITION LEVEL: ❶

YEKATERINBURG, RUSSIA
KOLTSOVO
RNAV RWY 08R, 08L

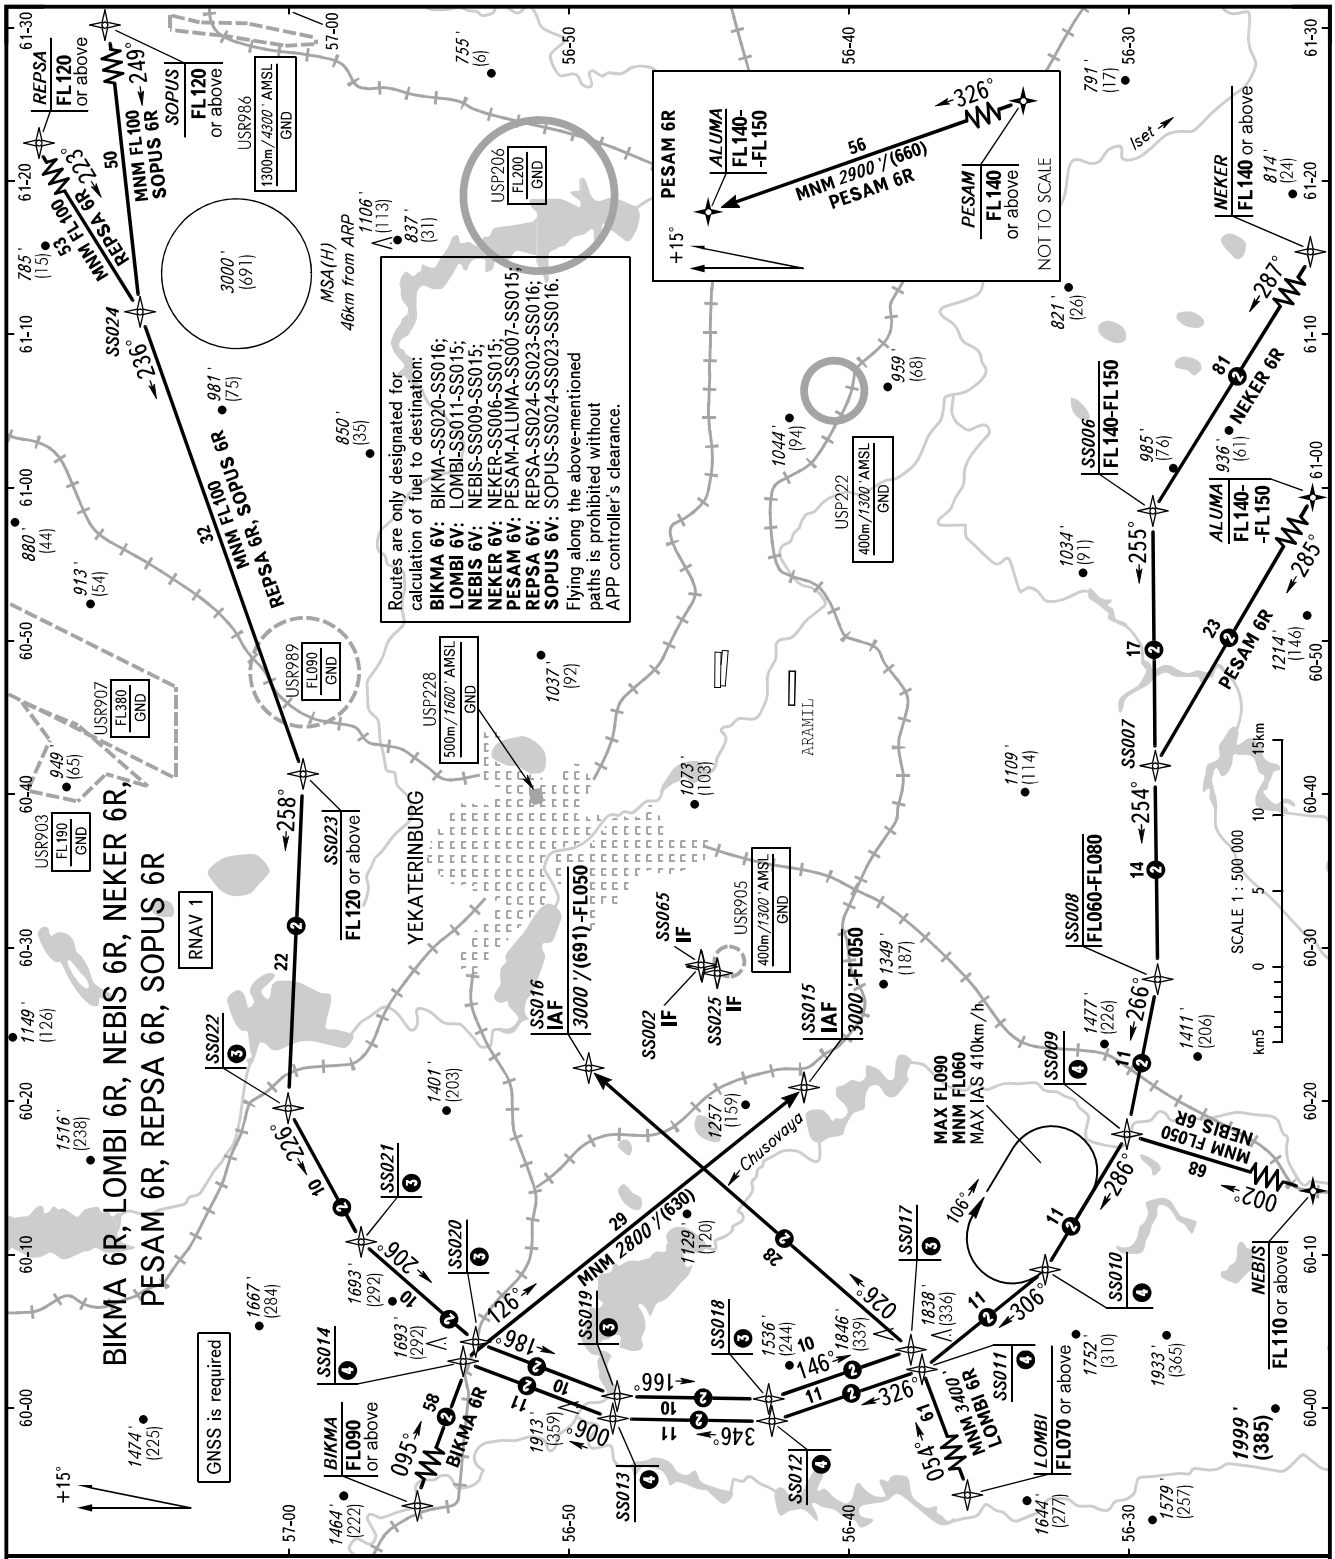

KOLTSOVO START	**124.300**
KOLTSOVO RADAR	**118.700**
KOLTSOVO APPROACH	**125.900**

❶ TRANSITION LEVEL:
- FL050 when QNH is 1013 hPa (760mm mercury column) or above;
- FL060 when QNH is 977 hPa (733mm mercury column) or above, but less than 1013 hPa (760mm mercury column);
- FL070 when QNH is less than 977 hPa (733mm mercury column).

❷ **MNM** *2900'*/**(660)**

❸ **FL080-FL090**
MAX IAS 410km/h

❹ **FL060-FL070**
MAX IAS 410km/h

BEARINGS AND TRACKS ARE MAGNETIC
ALTITUDES AND ELEVATION IN ***FEET***
HEIGHTS IN METRES
DISTANCES IN KILOMETRES

Alt set: -QNH(QFE on req);
-hPa(mm on req).

CHANGE: Heading, HGT