STANDARD ARRIVAL CHART INSTRUMENT (STAR) - ICAO

TRANSITION LEVEL : ❶

NORILSK, RUSSIA
ALYKEL
RWY 19

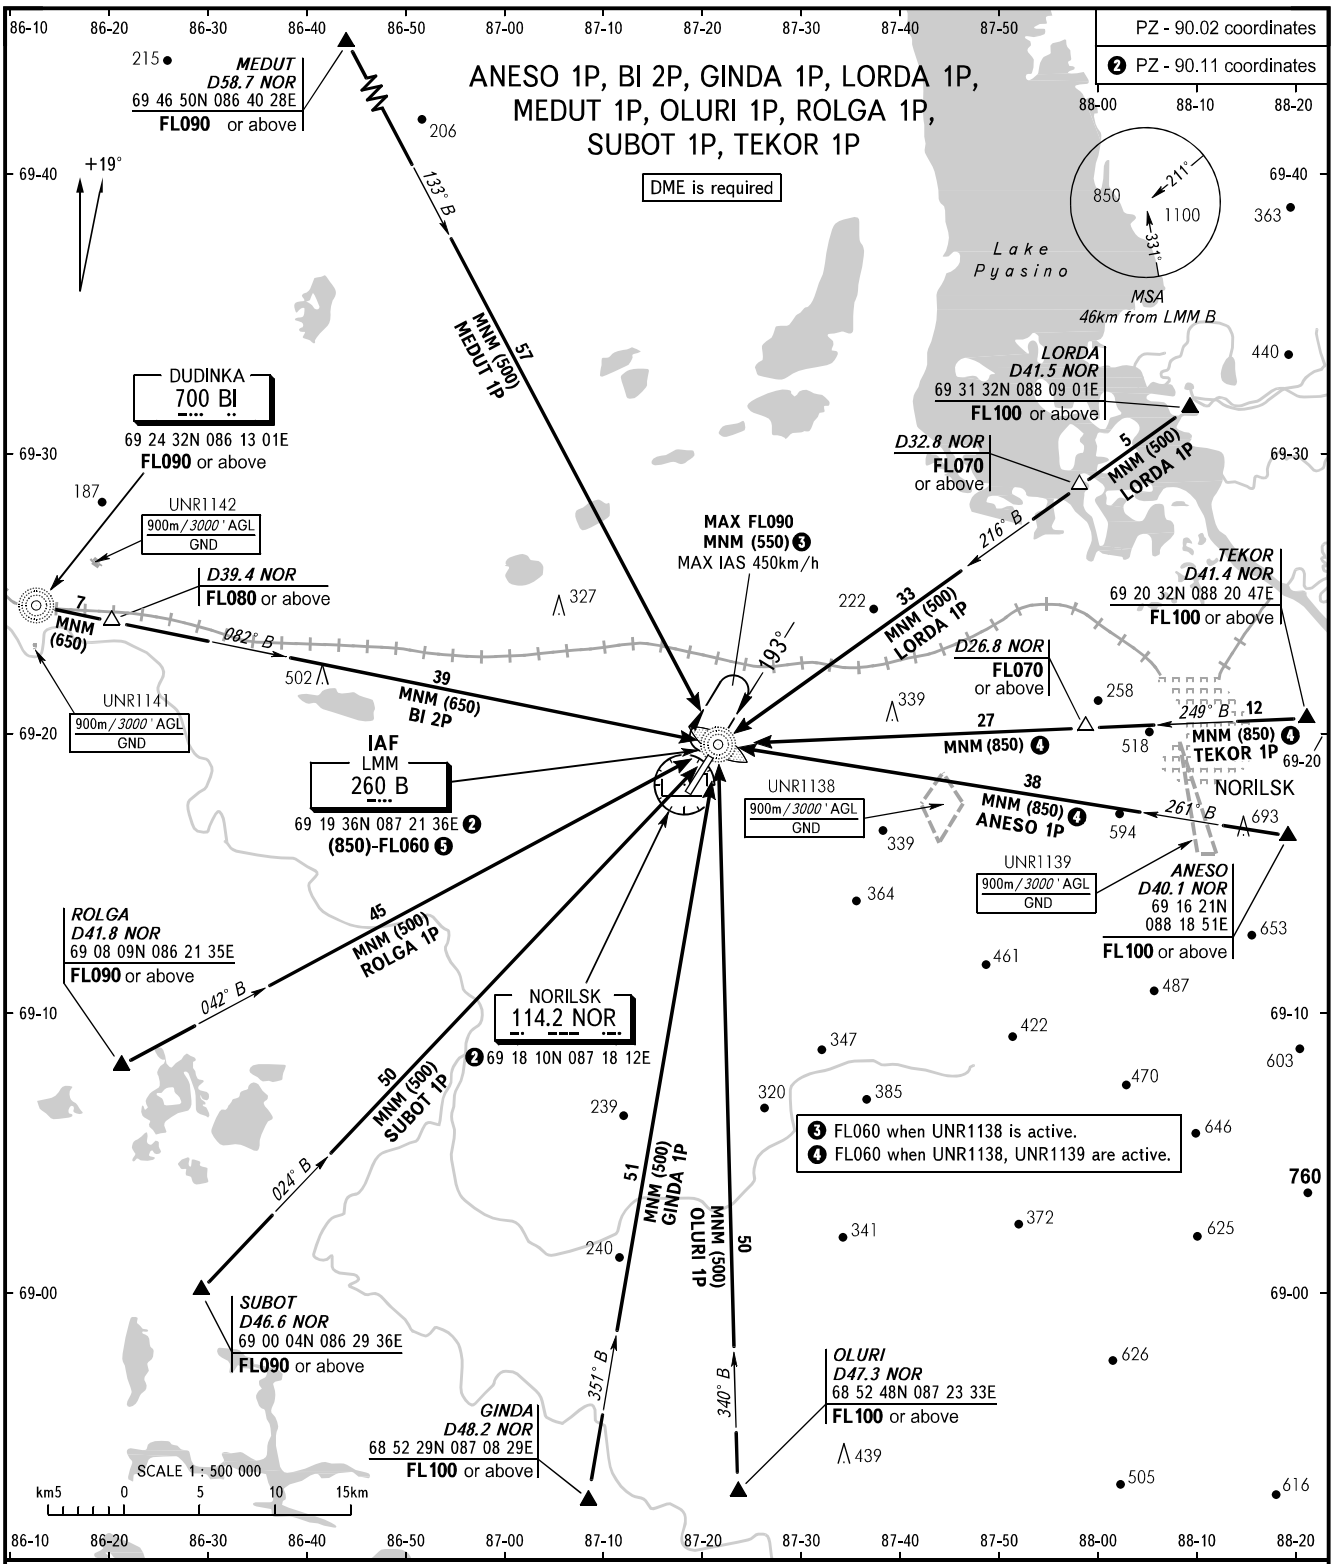

NORILSK PRECISION	**118.300**
NORILSK RADAR	**120.400**
NORILSK START	**118.300**

❶ TRANSITION LEVEL:
- FL060 when QFE is 744mm mercury column or above;
- FL070 when QFE is 717mm mercury column or above, but less than 744mm mercury column;
- FL080 when QFE is less than 717mm mercury column.

BEARINGS AND TRACKS ARE MAG.
ELEVATIONS, ALTITUDES AND HEIGHTS IN METRES
DISTANCES IN KILOMETRES

Alt set: - QFE (QNH on req);
- mm (hPa on req).

❺ FL060 when UNR1138, UNR1139 are active (ANESO 1P, TEKOR 1P). (1150) when UNR1142 is active (BI 2P).

CHANGE: New chart