


VFR
ARRIVAL
CHART

TRANSITION LEVEL : 1

PZ - 90.11 coordinates

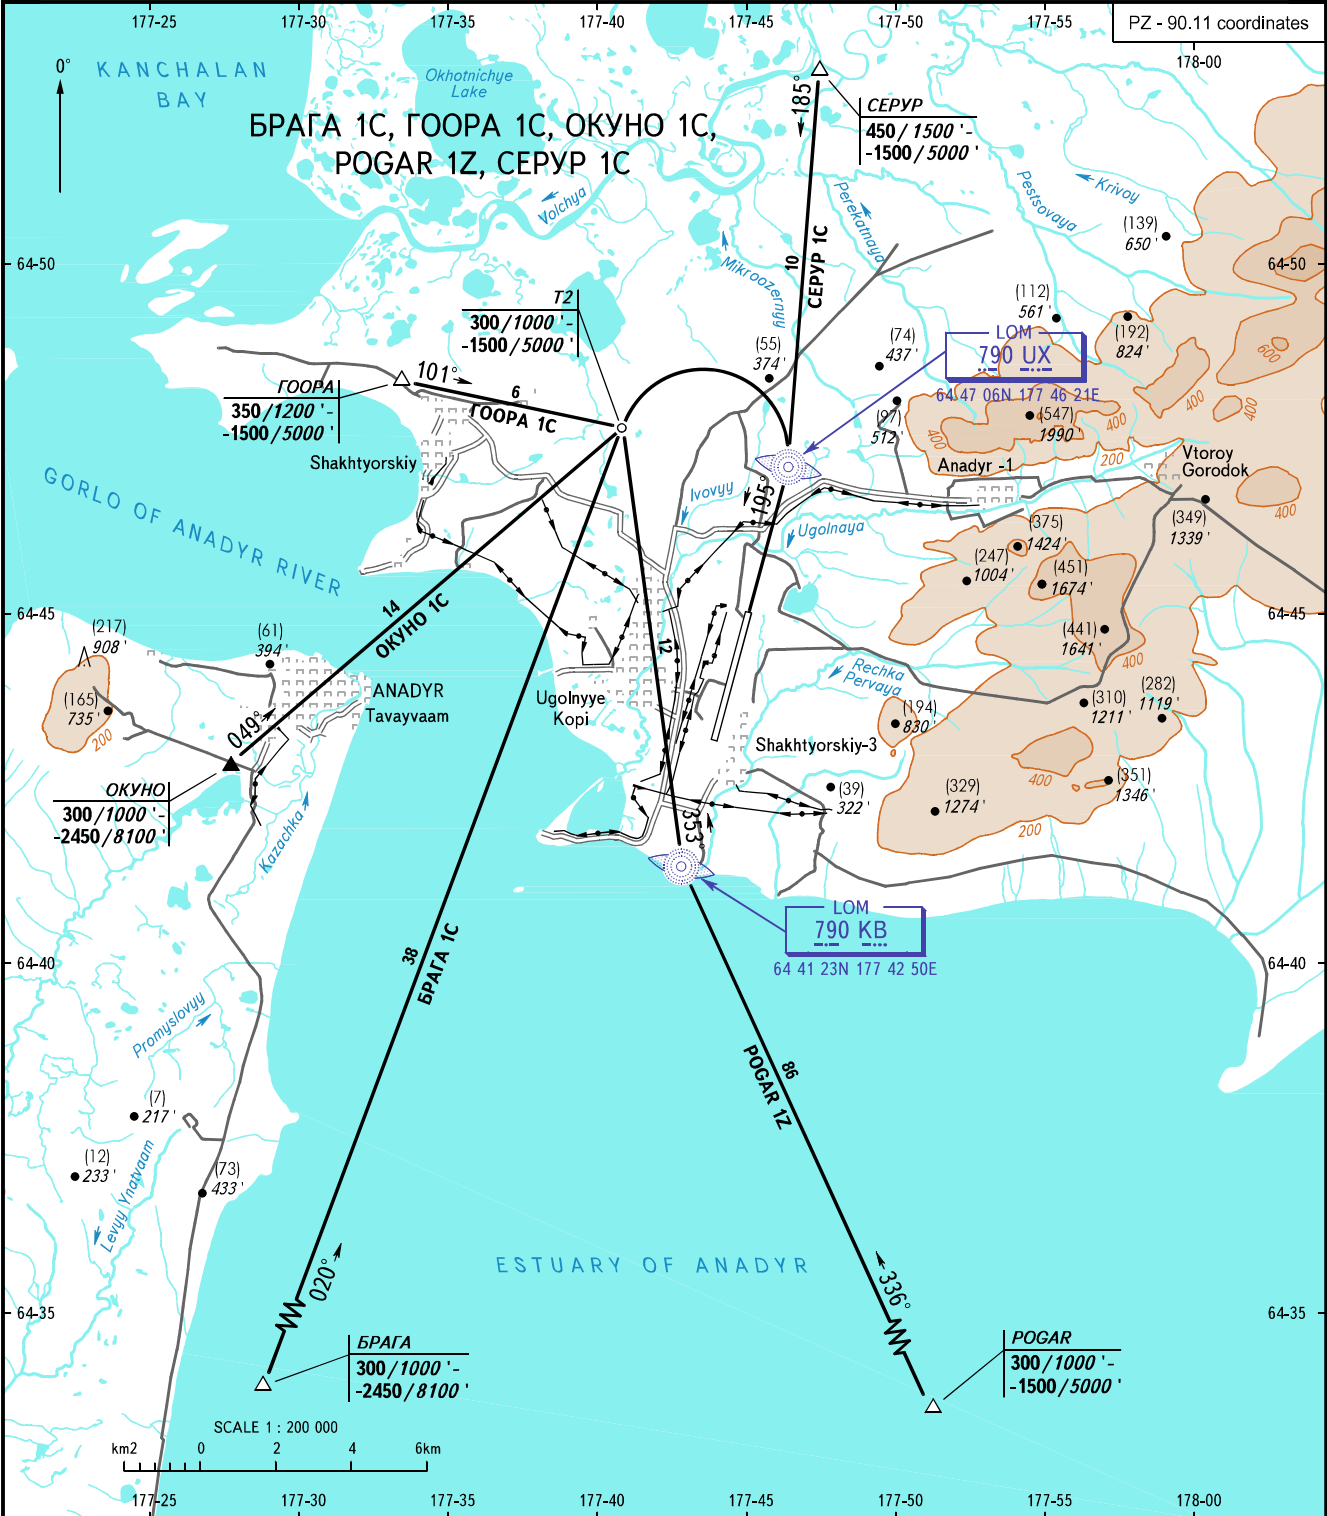

APPROACH	120.500
START	124.000

- 1 TRANSITION LEVEL:
- FL080 when QFE is 760mm mercury column (1013 hPa) or above;
 - FL090 when QFE is 733mm mercury column (977 hPa) or above, but less than 760mm mercury column (1013 hPa);
 - FL100 when QFE is less than 733mm mercury column (977 hPa).

BEARINGS AND TRACKS ARE MAGNETIC
ALTITUDES, ELEVATIONS IN METRES AND FEET
DISTANCES ARE IN KILOMETRES

All set: -QFE(QNH on req);
-mm(hPa on req).