
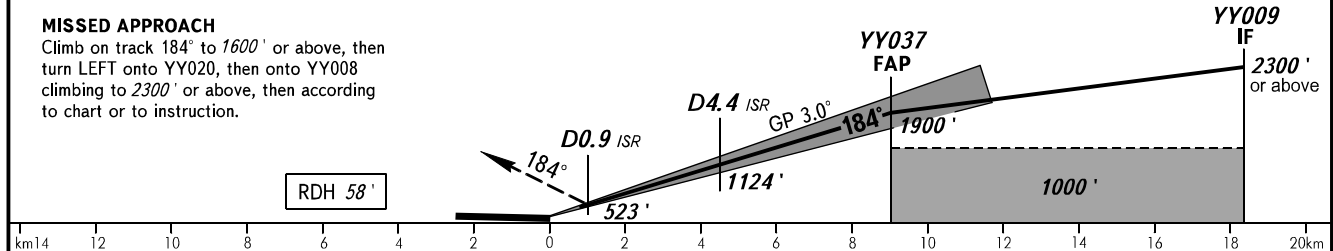


**INSTRUMENT
APPROACH
CHART - ICAO**

SIVKAR KRUG 124.600

SYKTYVKAR, RUSSIA
SYKTYVKAR
ILS Y RWY 18 CAT I

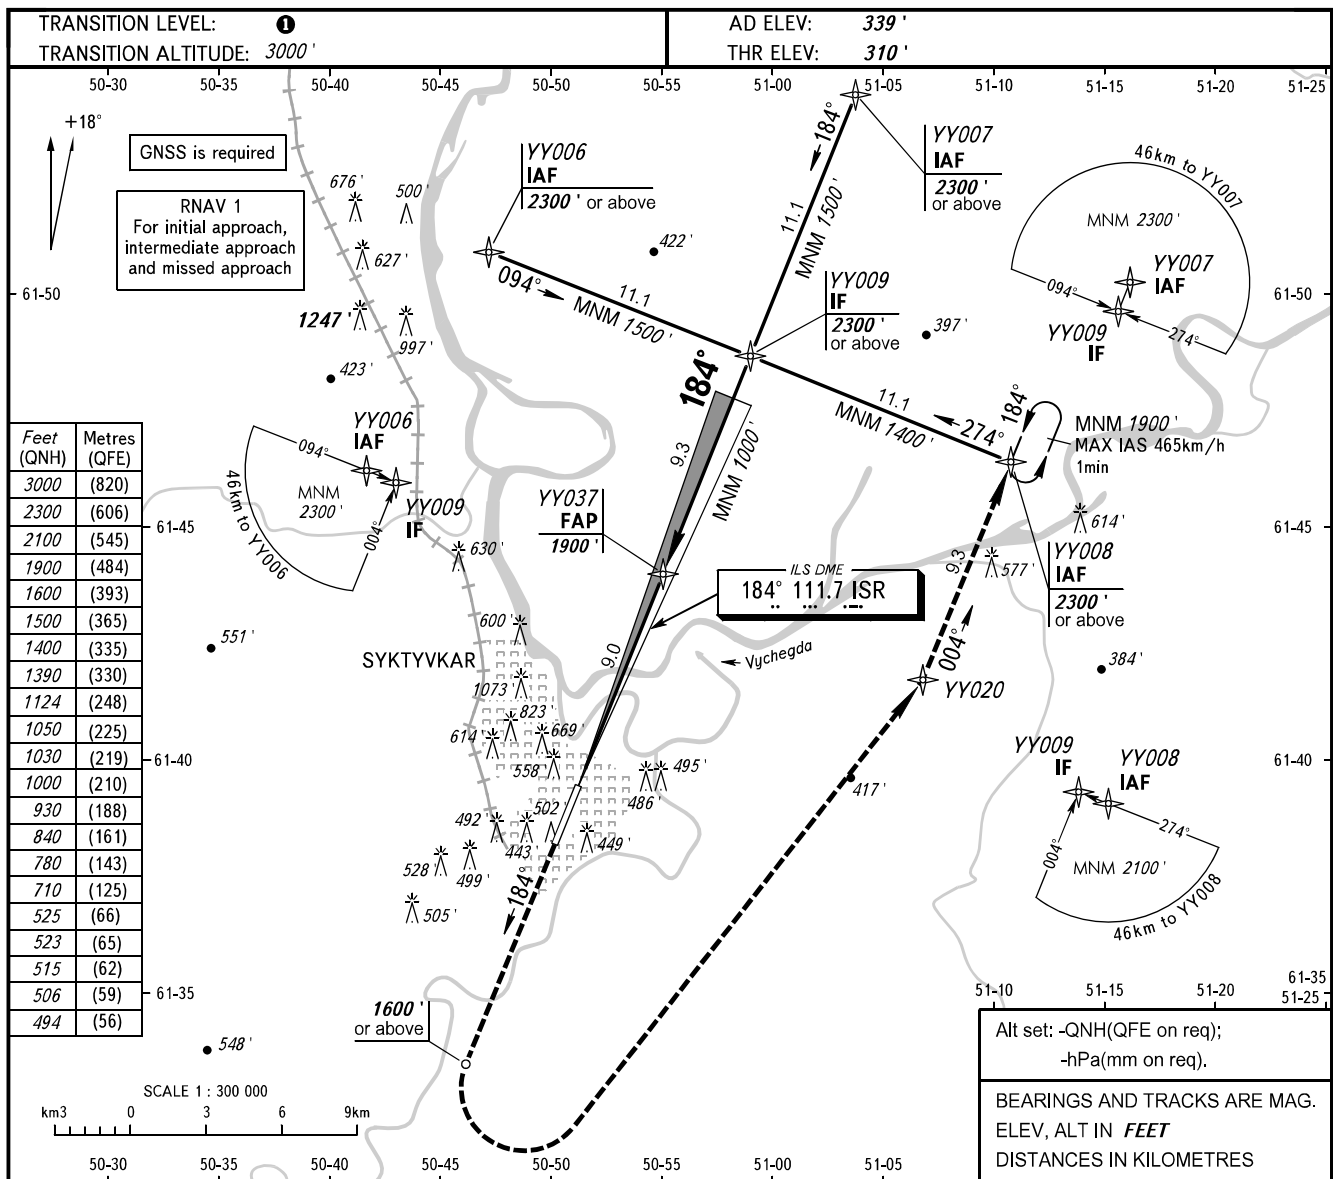

OCA(H)		A	B	C	D	TRANSITION LEVEL: - FL040 when QNH is 1013 hPa (760mm mercury column) or above; - FL050 when QNH is 977 hPa (733mm mercury column) or above but less than 1013 hPa (760mm mercury column); - FL060 when QNH is less than 977 hPa (733mm mercury column). WARNING: 1. Visual manoeuvring west of the aerodrome is PROHIBITED. 2. ILS DME reads zero at RWY 18 THR.									
Straight-in	CAT I	494' (184')	506' (196')	515' (205')	525' (215')										
	Approach														
Circling		780' (450')	840' (510')	930' (600')	1030' (700')										
GROUND SPEED		km/h	150	180	210	240	270	300	330	360	390	420	450		
RATE OF DESCENT		m/s	2.2	2.6	3.0	3.5	3.9	4.3	4.8	5.2	5.6	6.1	6.5		
		ft/min	427	512	597	682	768	853	938	1024	1109	1194	1280		