


**AERODROME GROUND
MOVEMENT AND AIRCRAFT
PARKING/DOCKING CHART**

KHANTYM TOWER 118.100
KHANTYM GROUND 119.000

KHANTY-MANSIYSK, RUSSIA

KHANTY-MANSIYSK

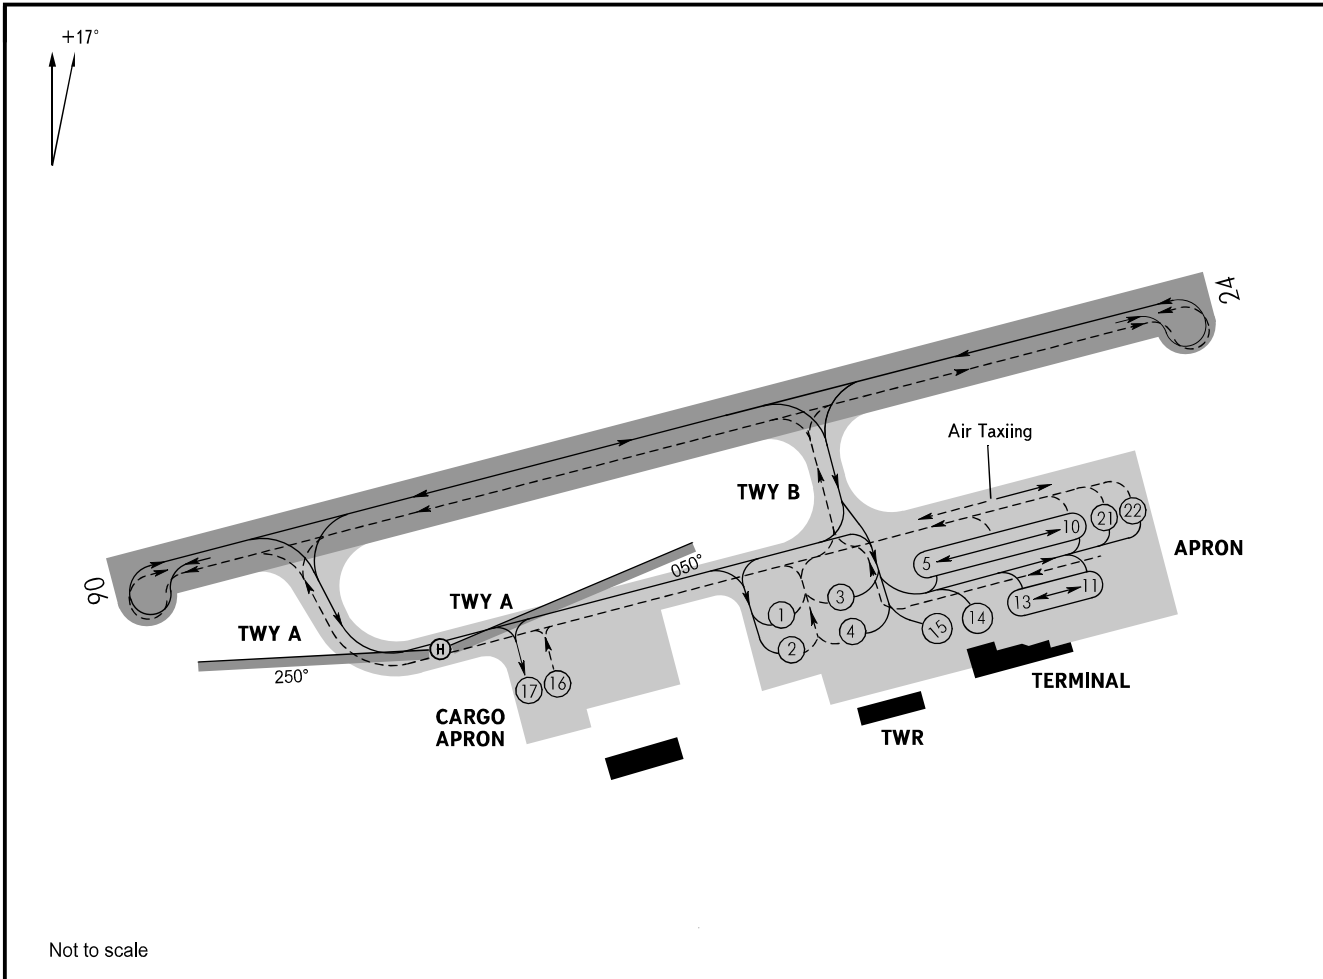

Not to scale

APRON:

Surface: Asphalt-Concrete
Strength: Passenger apron
Stands 1-7, 14, 15 - PCN 34/F/B/X/T
Stands 8-13 - PCN 20/R/C/X/T (mixed)
Stands 21-22 - PCN 55/F/B/X/T
Cargo apron
Stands 16, 17 - PCN 38/F/B/X/T

TAXIWAYS:

Width: A, B - 22.5m
Surface: A, B - Asphalt-Concrete
Strength: A, B - PCN 38/F/B/X/T

WARNING:

- Taxiing into stands 16, 17 shall be carried out by towing, taxiing out of these stands under own engines power.
- Stands 14, 15 are equipped with aerobridges.
- Taxiing out of stand 14 for engines start-up shall be executed by towing onto the taxi guide line between the rows of stands 5-10 and stands 11-13 to the "End of Push" sign marked on taxi guide line in the vicinity of stand 7.
Taxiing out of stand 15 for engines start-up shall be executed by towing onto the taxi guide line along stands 1,3 to the "End of Push" sign marked on taxi guide line in the vicinity of stand 1.
- Engines start-up is prohibited during towing.
- Taxi route for index 6 ACFT:
After landing: RWY - TWY A - stands 16, 17 (taxiing into the stands - by towing).
Before take-off: stands 16, 17 (taxiing out of the stands - under own engines power) - to the left to TWY A - RWY.
Taxi route for Mi-26 HEL:
After landing: RWY (helipad "H") - TWY A - stands 16, 17 (taxiing into the stands - by towing).
Before take-off: stands 16, 17 (taxiing out of the stands - by towing) to the left to TWY A - RWY (helipad "H").

ACFT types:

B737-200, B737-300, B737-400, B737-500, RRJ-95,
An-148, An-74, Gulfstream 4SP, Gulfstream 5,
SAAB 2000, Yak-40 and other class 3, 4 ACFT
B757-200, Tu-204, B737-200, B737-300, B737-400,
B737-500, B737-600, B737-700, B737-800,
B737 MAX 8
A-319, A-320, A-321, Tu-134, Tu-154,
Embraer-190, Embraer-195
Il-76, Mi-26
Il-18, MD-82, MD-83
ATR-72
ATR-42, An-24, An-26, CRJ-100, CRJ-200
An-30
An-12
Yak-42
Yak-40 and class below ACFT
EMB-120, L-410, Cessna Caravan
Mi-2, Mi-8, Ka-32
R-44, R-46, R-66, AS-350, AS-355, BO-105, Bell-430

STANDS:

1-4, 14-17
2, 4, 14-17
2-4, 14-17
16, 17
2-4
1-4, 8-10, 14-17, 21, 22
1-4, 8-10, 13-17, 21, 22
1-4, 13-15
2, 4
2-4, 14, 15
5-13, 21, 22
1-17, 21, 22
1-4, 16, 17, 21, 22
16, 17, 21, 22

CHANGE: New chart