
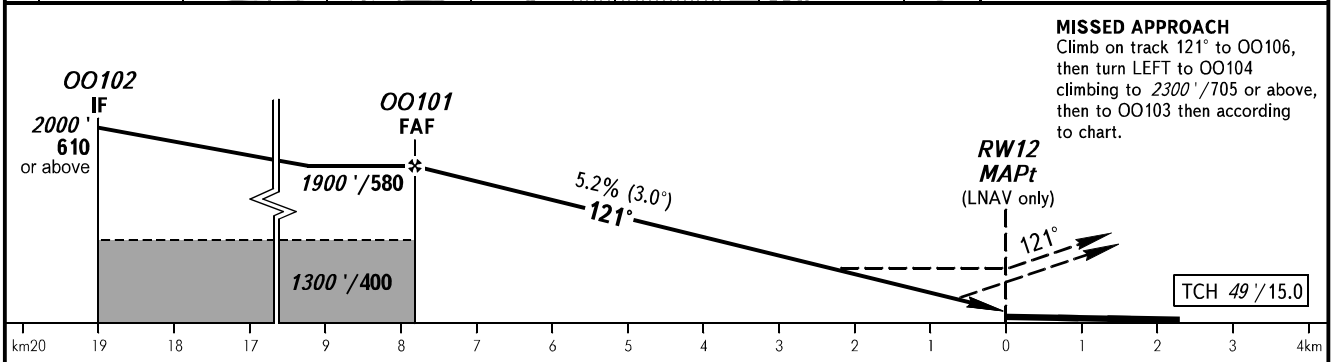


**INSTRUMENT
APPROACH
CHART - ICAO**

TOWER **118.300**

VORONEZH, RUSSIA
CHERTOVITSKOYE
RNAV RWY 12

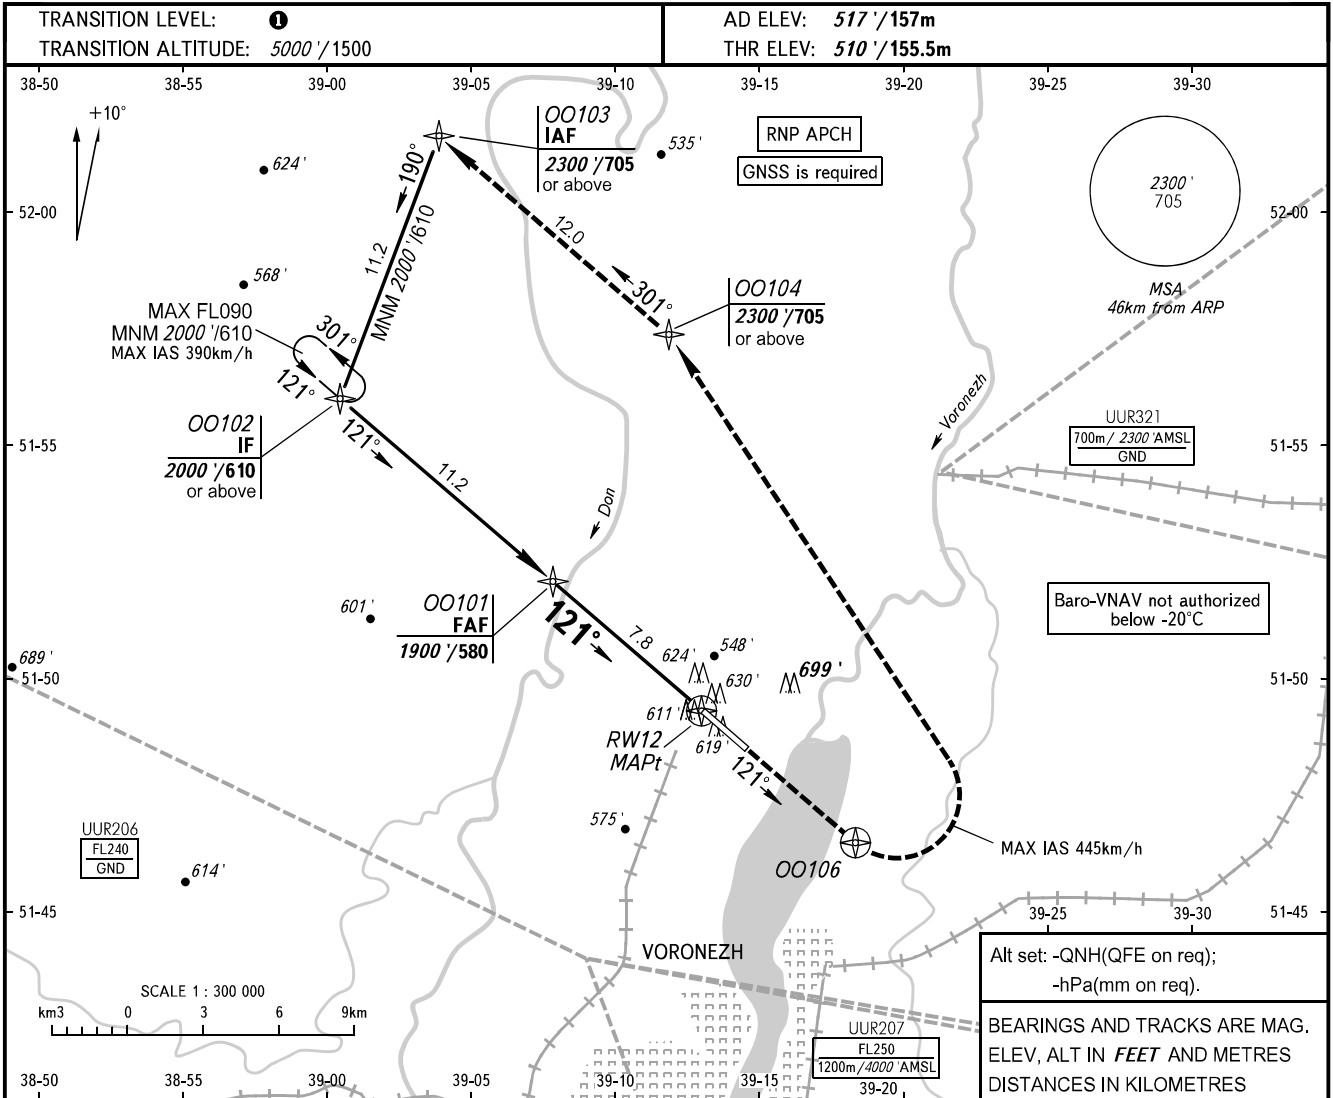

Alt set: -QNH(QFE on req);
-hPa(mm on req).
BEARINGS AND TRACKS ARE MAG.
ELEV, ALT IN FEET AND METRES
DISTANCES IN KILOMETRES

MISSED APPROACH
Climb on track 121° to OO106,
then turn LEFT to OO104
climbing to 2300' / 705 or above,
then to OO103 then according
to chart.

OCA(H)		A	B	C	D								
Straight-in	LNAV	860 (345) / (110)	870 (355) / (110)	880 (365) / (115)	880 (365) / (115)								
	LNAV / VNAV	759 (249) / (80)	772 (262) / (80)	780 (270) / (85)	790 (280) / (90)								
Circling		1000 (478) / (150)	1010 (493) / (155)	1130 (606) / (185)	1210 (689) / (215)								
GROUND SPEED		km/h	150	180	210	240	270	300	330	360	390	420	450
RATE OF DESCENT		m/s	2.2	2.6	3.0	3.5	3.9	4.3	4.8	5.2	5.6	6.1	6.5
		ft / min	427	512	597	682	768	853	938	1024	1109	1194	1280

TRANSITION LEVEL:
- FL060 when QNH is 1013 hPa (760mm mercury column) or above;
- FL070 when QNH is 977 hPa (733mm mercury column) or above, but less than 1013 hPa (760mm mercury column);
- FL080 when QNH is less than 977 hPa (733mm mercury column).

CHANGE: New chart