



**INSTRUMENT
APPROACH
CHART - ICAO**

NORILSK RADAR **120.400**
NORILSK PRECISION **118.300**
NORILSK START **118.300**

NORILSK, RUSSIA
ALYKEL
ILS CAT I RWY 01

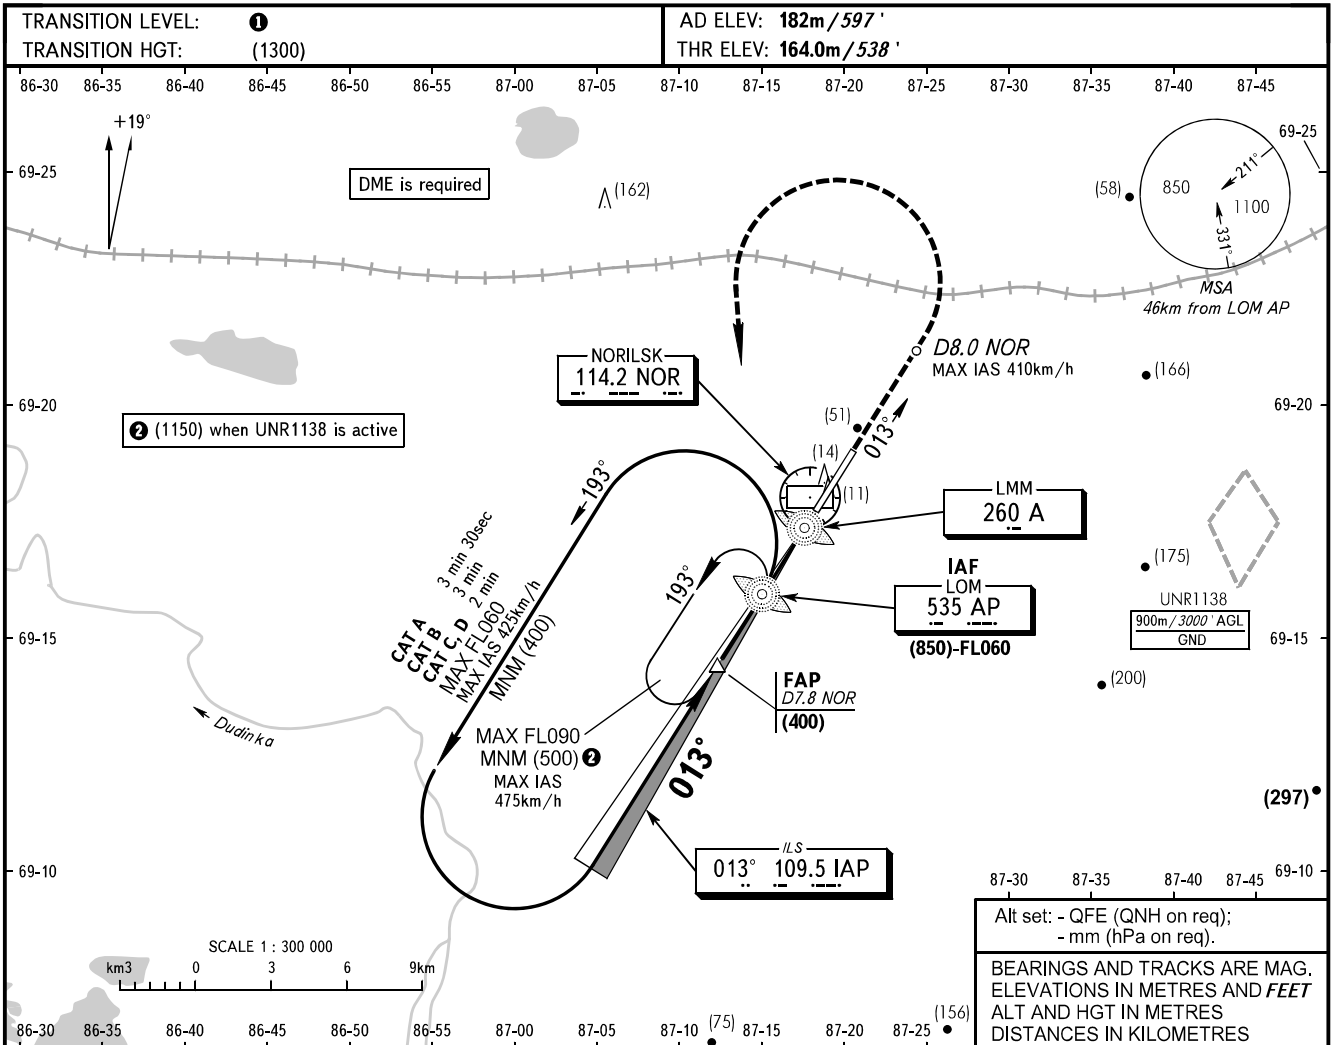

Alt set: - QFE (QNH on req);
- mm (hPa on req).
BEARINGS AND TRACKS ARE MAG.
ELEVATIONS IN METRES AND FEET
ALT AND HGT IN METRES
DISTANCES IN KILOMETRES

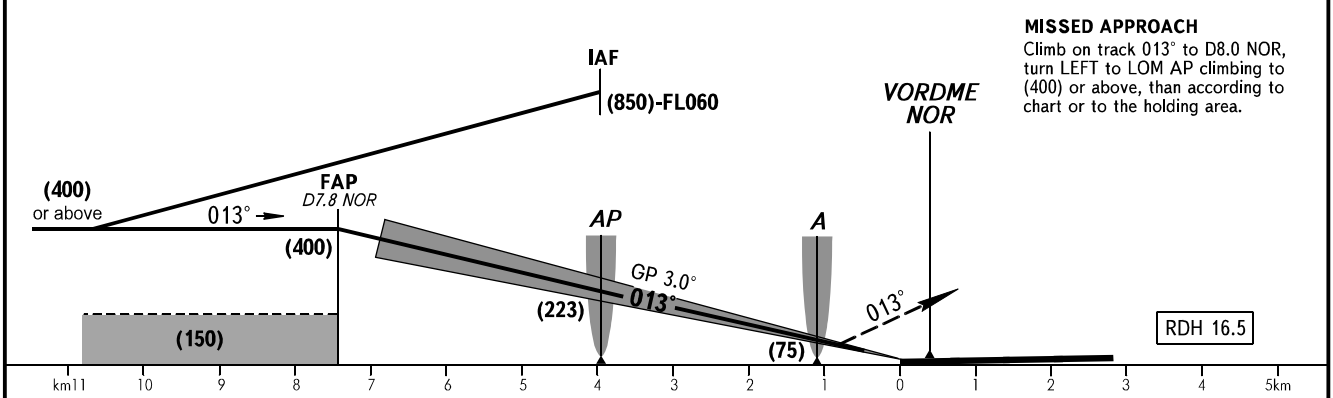

OCA(H)		A	B	C	D
Straight-in Approach	CAT I	215(51)	218(54)	222(58)	225(61)
Circling		305(120)	335(150)	365(180)	395(210)

1 TRANSITION LEVEL:
- FL060 when QFE is 744mm mercury column or above;
- FL070 when QFE is 717mm mercury column or above,
but less than 744mm mercury column;
- FL080 when QFE is less than 717mm mercury column.

GROUND SPEED	km/h	150	180	210	240	270	300	330	360	390
RATE OF DESCENT	m/s	2.2	2.6	3.0	3.5	3.9	4.3	4.8	5.2	5.6