


AERODROME GROUND
MOVEMENT CHART - ICAO

SOVETSKIY TOWER 120.800

SOVETSKIY, RUSSIA

SOVETSKIY

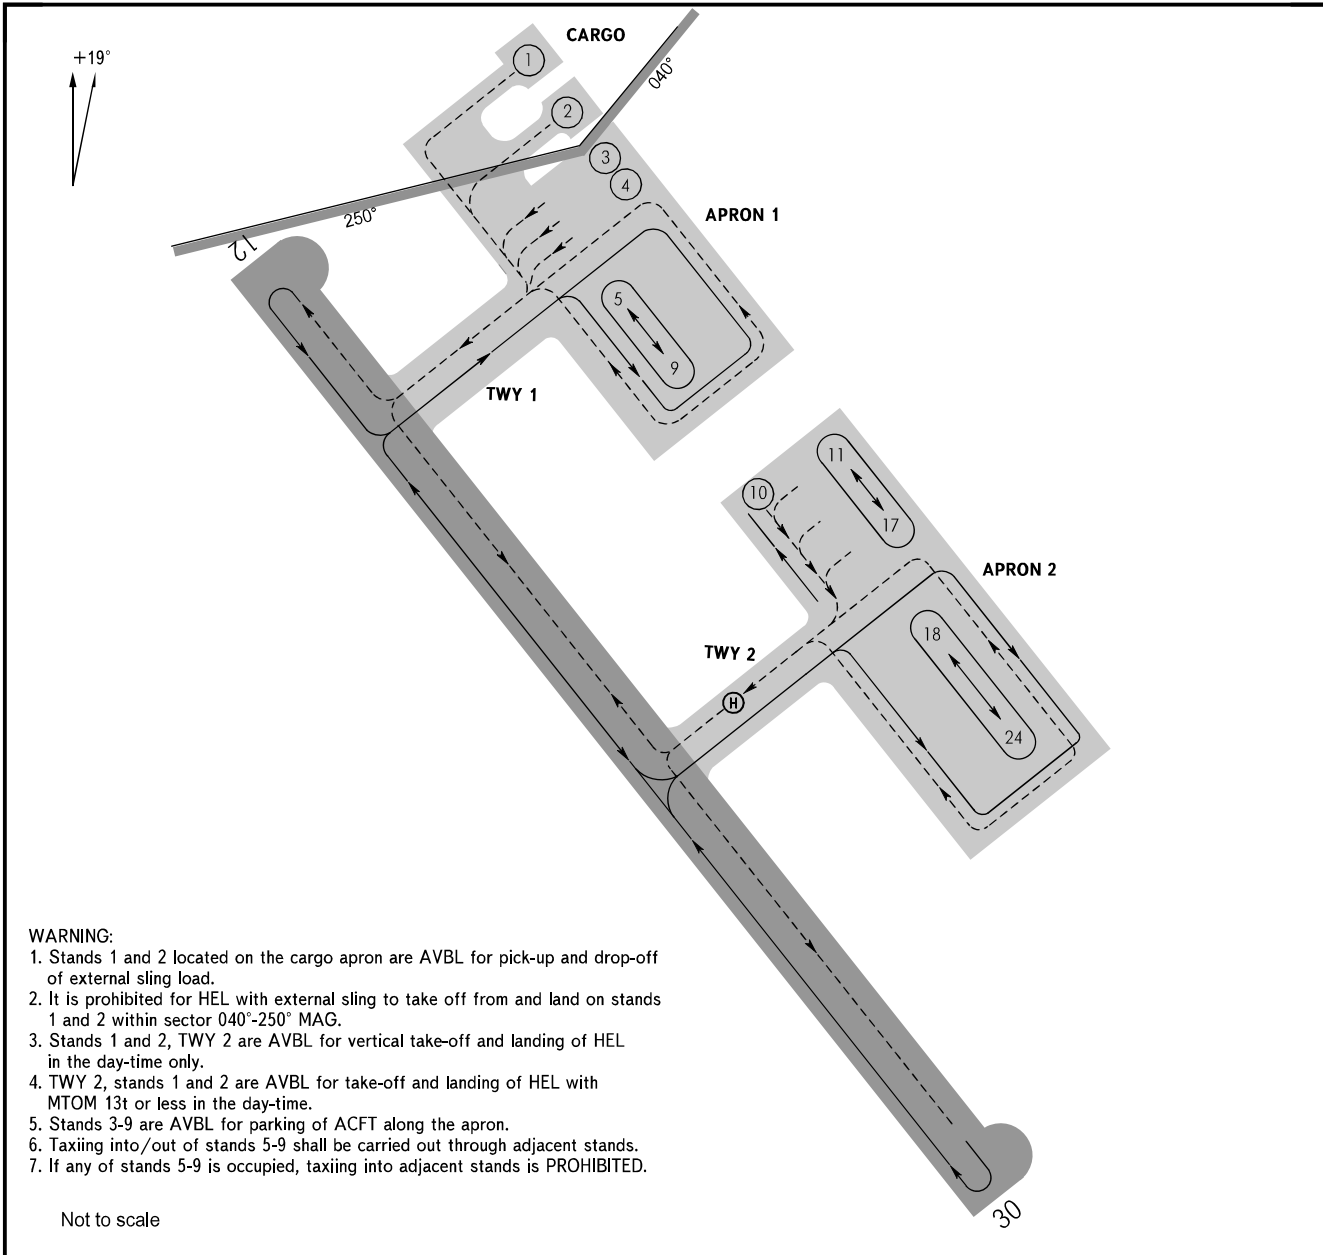

WARNING:

1. Stands 1 and 2 located on the cargo apron are AVBL for pick-up and drop-off of external sling load.
2. It is prohibited for HEL with external sling to take off from and land on stands 1 and 2 within sector 040°-250° MAG.
3. Stands 1 and 2, TWY 2 are AVBL for vertical take-off and landing of HEL in the day-time only.
4. TWY 2, stands 1 and 2 are AVBL for take-off and landing of HEL with MTOM 13t or less in the day-time.
5. Stands 3-9 are AVBL for parking of ACFT along the apron.
6. Taxiing into/out of stands 5-9 shall be carried out through adjacent stands.
7. If any of stands 5-9 is occupied, taxiing into adjacent stands is PROHIBITED.

Not to scale

Apron 1 - Stands 3-9:

Surface: - Reinforced Concrete
Strength: - PCN 25/R/A/X/T

Apron 2 - Stands 10-24:

Surface: - Reinforced Concrete
Strength: - PCN 25/R/A/X/T

Cargo - Stands 1, 2:

Surface: - Reinforced Concrete
Strength: - PCN 13/R/B/X/T

TAXIWAYS:

Width: 1 - 22m
2 - 16m
Surface: 1, 2 - Reinforced Concrete
Strength: 1 - PCN 27/R/A/X/T
2 - PCN 25/R/A/X/T

ACFT types:

ATR-42, ATR-72
CRJ-100, CRJ-200, EMB-120ER
RRJ-95B and its modifications
Il-76, Tu-154, Il-18, An-12
Tu-134, Yak-42
An-24, An-26, An-74, Yak-40
An-2
An-28, L-410
Mi-26 (HEL MTOM 13t or more)
Mi-8 (HEL MTOM 13t or less)

STANDS:

5-9
5-9
5,7
5
5-9
3-9, 18-24
10-17
18-24
5,7
1-9,12-24

CHANGE: New chart