INSTRUMENT APPROACH CHART - ICAO

KOLTSOVO RADAR	118.700
KOLTSOVO START	124.300

YEKATERINBURG, RUSSIA
KOLTSOVO
NDB Z RWY 26R

TRANSITION LEVEL: ❶
TRANSITION ALTITUDE: 4000 '

AD ELEV: 766 '
THR ELEV: 764 '

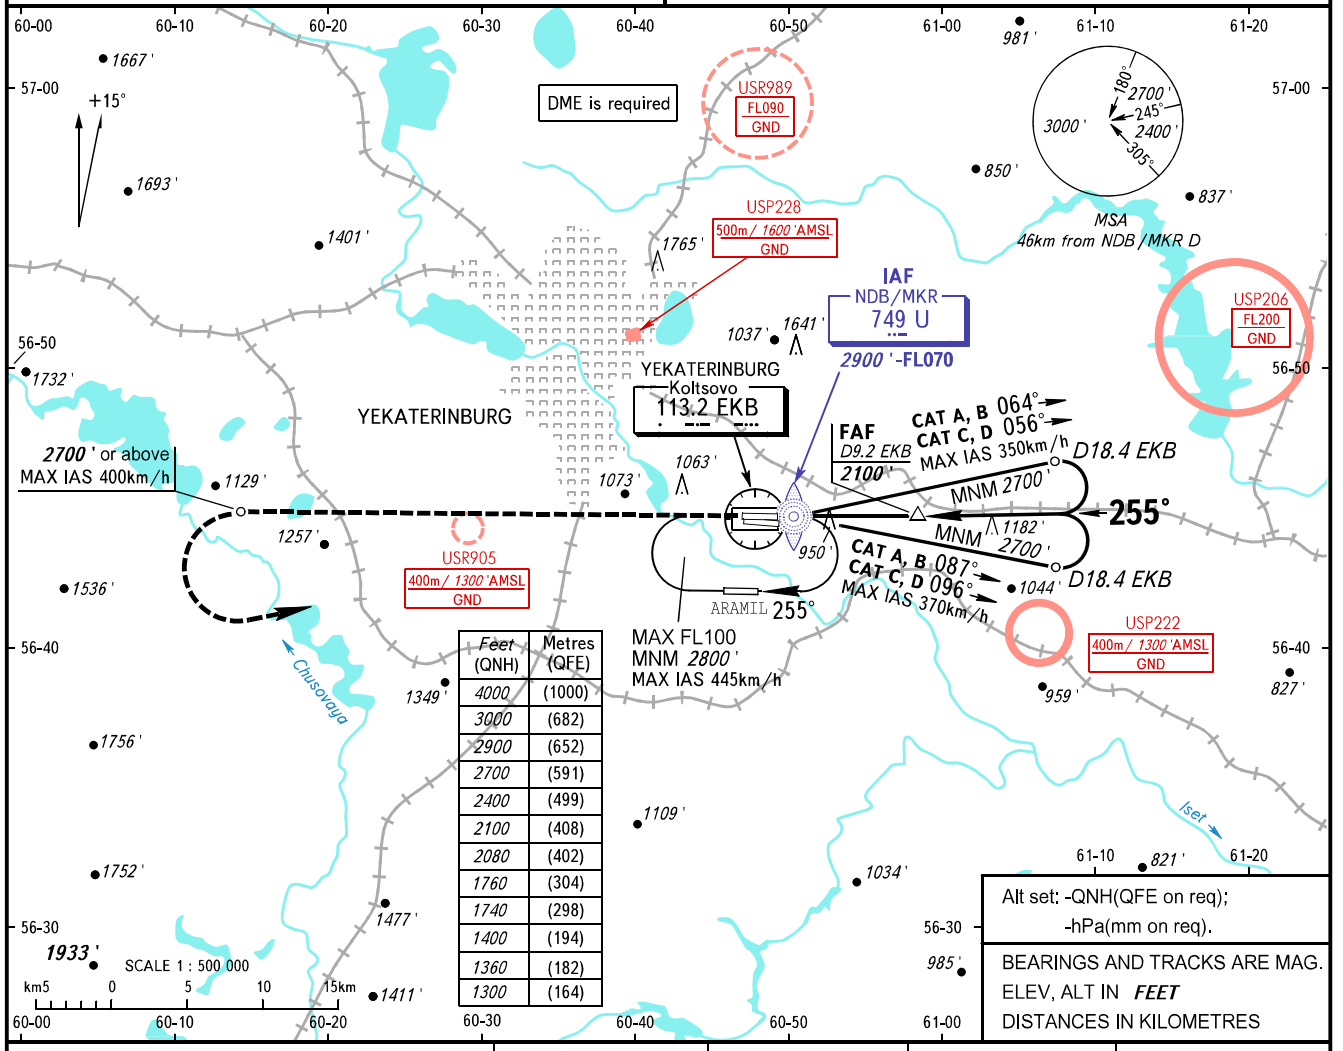

Feet (QNH)	Metres (QFE)
4000	(1000)
3000	(682)
2900	(652)
2700	(591)
2400	(499)
2100	(408)
2080	(402)
1760	(304)
1740	(298)
1400	(194)
1360	(182)
1300	(164)

Alt set: -QNH(QFE on req);
-hPa(mm on req).

BEARINGS AND TRACKS ARE MAG.
ELEV, ALT IN *FEET*
DISTANCES IN KILOMETRES

DME EKB	5.0	7.0	9.0	9.2
ALTITUDE	1400 '	1740 '	2080 '	2100 '

MISSED APPROACH
Climb straight ahead to *2700* ' or above, turn LEFT to NDB/MKR U climbing to *2900* ' or above, then according to chart or to the holding area.

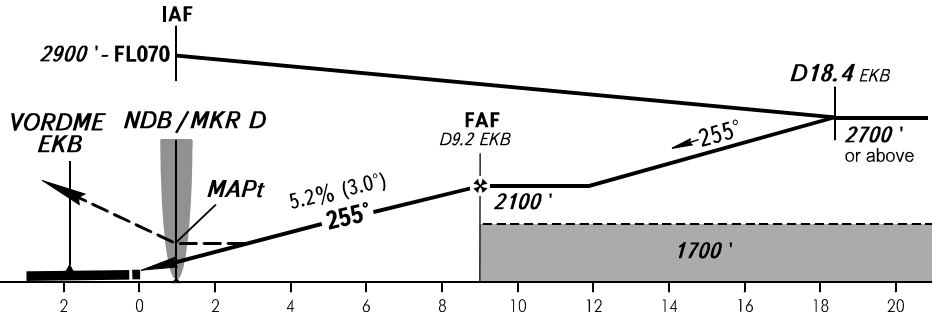

OCA(H)	A	B	C	D
Straight-in Approach	1300 ' (530 ')	1300 ' (530 ')	1300 ' (530 ')	1300 ' (530 ')
Circling	1300 ' (530 ')	1360 ' (600 ')	1740 ' (970 ')	1760 ' (1000 ')

❶ TRANSITION LEVEL:
- FL050 when QNH is 1013 hPa (760mm mercury column) or above;
- FL060 when QNH is 977 hPa (733mm mercury column) or above, but less than 1013 hPa (760mm mercury column);
- FL070 when QNH is less than 977 hPa (733mm mercury column).

NOTE:
1. Turn before MAPt is prohibited.
2. Timing not authorized for defining MAPt.

GROUND SPEED	km/h	150	180	210	240	270	300	330	360	390
RATE OF DESCENT	m/s	2.2	2.6	3.0	3.5	3.9	4.3	4.8	5.2	5.6
	ft/min	427	512	597	682	768	853	938	1024	1109

CHANGE: New chart