STANDARD ARRIVAL CHART INSTRUMENT (STAR) - ICAO

TRANSITION LEVEL: ❶

ASTRAKHAN, RUSSIA

ASTRAKHAN
RNAV RWY 09

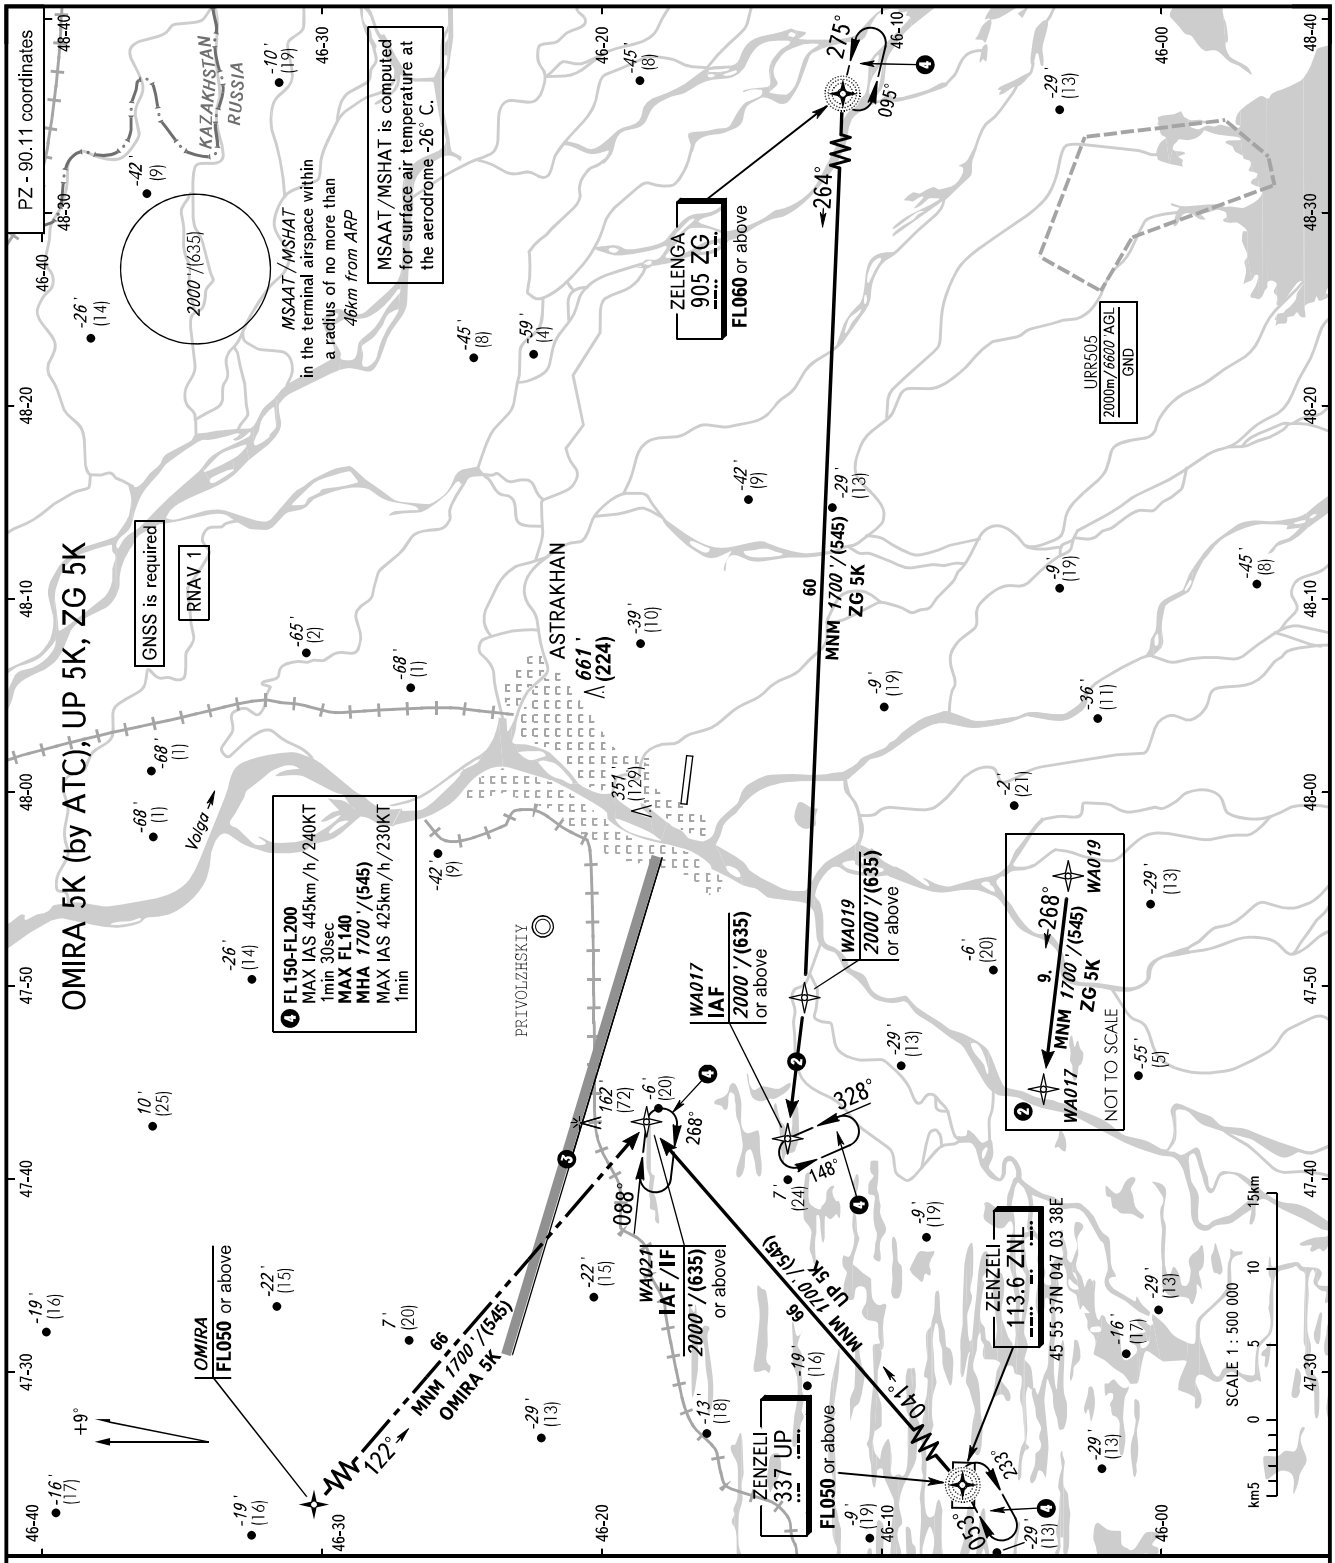

APPROACH	**126.000**
RADAR	**120.600**
TOWER	**118.600**

WARNING
Simultaneous holding at the same ALT/FL is not authorized in holding areas at WA021 and WA017.

❶ TRANSITION LEVEL:
- FL040 when QNH is 1013 hPa (760mm mercury column) or above;
- FL050 when QNH is 977 hPa (733mm mercury column) or above, but less than 1013 hPa (760mm mercury column);
- FL060 when QNH is less than 977 hPa (733mm mercury column).

❸ ACFT flying to the North of limiting bearing line 279° from ARP at the distance from 5 to 40km at FL200 or below shall be carried out on coordination with ATS unit.

BEARINGS AND TRACKS ARE MAGNETIC
ELEVATIONS IN ***FEET*** AND METRES
ALTITUDES IN ***FEET***
HEIGHTS IN METRES
DISTANCES IN KILOMETRES

Alt set: -QNH(QFE on req);
-hPa(mm on req).

CHANGE: New chart